


SENCOR®

SLE39F52M4

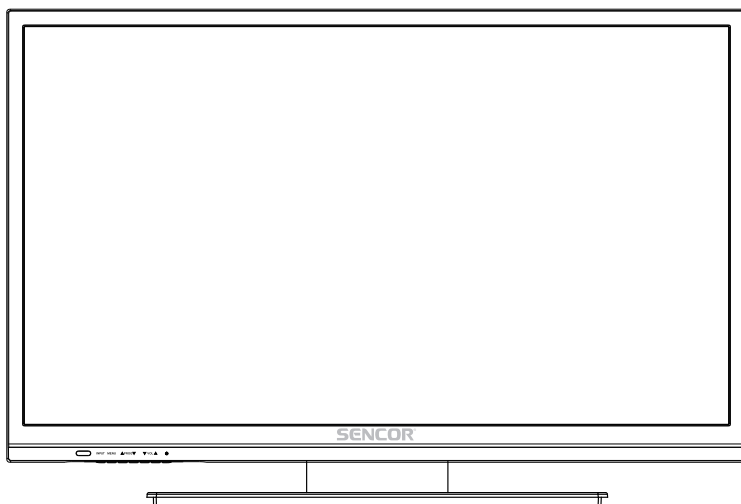

LED TV OWNER'S MANUAL

Please read this manual carefully before TV operation.
Retain it for future reference.

Record model number and serial number of the set.

See the label attached on the back cover and quote this information
to your dealer when you require service.

Important safety instructions	3
Introduction	5
Stand and wall-mounting instructions (optional)	6
General Description	7
Overview of front panel	7
Overview of back panel	8
Overview of Remote Control	9
External Connection	13
Antenna connection	13
Connecting VCR	13
Connecting a Camcorder	14
Connecting a DVD Player / Set-Top Box	15
Connecting a DVD Player/Set-Top Box via DVI	16
Connecting DVD Player/Set-Top Box via HDMI	17
Connecting Digital Audio System	18
Connecting PC	18
Supporting signals	19
Basic Operation	20
Turning the TV On and Off	20
Menu operation	20
1. Input Setup	20
2. Channels Selection	20
3. Volume Adjustment and Mute Setup	20
4. Current Channel Information	21
5. GUIDE Menu	21
6. Installation Guide	22
Picture	22
Sound	23
Time	26
Option	27
Lock	28
Function	29
PVR File System	30
PVR Guide	31
Digital Media Player	33
Device and File Management	34
1. Photo	34
2. Music	36
3. Movie	37
4. Text	39
5. My Disk	41
Troubleshooting	42
Specifications	44

Important safety instructions

EN



This symbol is used to warn users against "dangerous voltage" in the product cover, which may pose a risk of electric shock.



This symbol is used to remind user of important guidelines for the use and service delivered with the device.

- 1) **READ** please the operating guide before using the product.
- 2) Please, follow the instructions contained in the Operating Manual.
- 3) Pay attention to all warnings.
- 4) **CHECK**, that all the connections (extension cables and connections between the components of the device) are carried out properly, according to the manufacturer's instructions. Prior to connecting or changing a connection, switch the device off and disconnect from power.
- 5) If you have any questions concerning the installation, operating or safety of the device, please **CONTACT** the supplier.
- 6) **HANDLE WITH CARE** the glass panels and the device covers. The glass of the screen may break on impact and cause a serious injury.
- 7) To ensure adequate ventilation, leave at least 10 cm of space around the television set. This space will prevent overheating and following damage to the television set.
 - Do not use the device in a dusty environment.
 - Never block the jacks and openings by putting the television set on a bed, a sofa, a pillow or other similar surfaces.
 - Do not place the television set into an enclosed space, like a bookcase or a wardrobe, if an adequate ventilation cannot be ensured.
- 8) **DO NOT COVER** the ventilation openings of the device with e.g. newspaper, a tablecloth, drapes, etc. Overheating causes damage and will shorten the life of the device.
- 9) The television set may be damaged if placed on direct sunlight or close to heating. Please, avoid using the product in very hot or humid environments or in places where the temperature drops below 5°C (41°F). **DO NOT PUT** hot objects or objects with an open flame, e.g. candles or lamps on or near the device. High temperature can melt the plastic parts and cause fire.
- 10) Never use electrical appliances close to water. Operation of such devices close to e.g. bathtub, sink, water tank, in a humid environment, close to a swimming pool, can cause fire or electric shock.
 - Television set may not get wet. Do not pour liquids on the television set. Do not use the television set if an object or liquid gets inside. It could cause electric shock and damage the television set. Have it checked immediately by a qualified technician.
 - Do not put flammable materials and open flame (e.g. candles) close to the television set to avoid fire.
 - **DO NOT EXPOSE THE DEVICE TO DRIPPING OR SPRAYING WATER AND DO NOT PLACE AND OBJECTS CONTAINING LIQUID ONTO THE DEVICE (FOR EXAMPLE VASES).**
- 11) **DO NOT USE** the headphones set at extreme volume, it could cause a permanent hearing loss.
- 12) Operate the television set only in the 230 V 50 Hz voltage range. Use the AC power cord, supplied with the product. If the television is grounded (class I) it must be surely plugged in the socket.
 - **The socket where you plug the AC cable or the adapter must be easily accessible.**
 - **Unplug the device if you want to unplug it from power supply.**

Note: If the device has an adapter, use the adapter and the AC power cable supplied with the product. Do not use damaged power socket. Make sure that the plug is correctly inserted into the socket. If the plug is loose, an arc can cause fire. Contact an electrician to change a socket.
- 13) Check that nothing lies on the cable and that there are no bends at the plug, pins and outputs of the device.
- 14) Use only accessories recommended by the manufacturer.
- 15) Use only carts with bases, tripods, brackets or stands specified by the manufacturer or sold with the product. When using the cart, be careful not to overturn it, you may cause injury. The device must be fastened to the floor or to the wall according to the installation instructions to prevent damage. Put the device on a flat surface.
- 16) Disconnect the power cable during a thunderstorm or when you will not use the device for a longer period of time.

Important safety instructions

- 17) For repairs, contact and authorized service provider. Never try to repair the device yourself. By opening the enclosure you can be exposed to dangerous voltage or other risky situations. Repair is necessary if there is damage to the power cord or the plug, if water gets into the device or some object falls into it, if the device gets wet, does not function normally or if you dropped it.
- 18) Wipe the television cover with a soft dry cloth. Dust the screen gently with a soft cloth. Clean stubborn stains with a cloth soaked in a solution of soap and lukewarm water. Never use for cleaning solvents such as paint thinner or gasoline. Disconnect the AC power cord from the socket when cleaning the television. Otherwise you are in danger of electrical shock.
- 19) Do not throw batteries in the fire.
 - **Do not short circuit, take apart, or overheat the batteries. If the batteries are not replaced properly you risk an explosion. Replace batteries on with the same or equivalent type.**
- 20) Disposal of used batteries:
 - Dispose of the used batteries in accordance with the local environmental laws and regulations.
- 21) Do not dispose of the television set with regular household waste. When disposing of it, observe the the local laws and regulations.

Note 1: This is a class A product. It may interfere with radio waves during operation. The user may need a repair of this problem. Please, contact the retailer.

Note 2: Electromagnetic fields may cause a temporary performance decrease. It may interfere with the picture.

SENCOR® Appendix to the LCD screen instruction manual

Precautions for static images, red/blue/green/black spots on the screen

A static image may cause permanent damage to LCD panel

- Do not display a static image on the LCD panel for more than 2 hours as it can lead to image retention. This image retention is known as "screen burn". To avoid image retention, lower the brightness and contrast of the screen for viewing static images.
- Similar "screen burn" effects can be caused by displaying a static television channel logo.
- Images displayed for longer period of time in 4:3, 16:9 or similar modes, that do not spread throughout the entire screen, may leave traces of borders displayed on the left, right or center of the screen caused by the difference of light emission on the screen. A similar effect can be seen when playing a DVD or a game console.
- Displaying static images from video games and the PC for a longer period of time may produce partial after-images. In order to prevent this effect, lower the brightness and contrast of the screen for viewing static images.



The warranty does not cover damage caused by the reasons described above!

Red, blue, green and black spots may appear on the screen

- This is typical for liquid crystal panels and is not a problem. Liquid crystal panels are built with very high precision technology, ensuring fine picture detail. Dead pixels may sporadically appear on the screen depicted as red, green, blue or black spots (up to 0.001% of the total display pixels). Please note this does not affect the performance of your LCD screen.

Thank you for purchasing our LCD television.

Your new LED TV welcomes you to a world of beautiful colours and true sound - we are convinced it will bring you never before experienced pleasure from watching TV.

Before installing and setting up your TV, we recommend reading the instruction manual in full – inside is important information for the optimal and safe use of its features and functions. Keep the manual for future use.

FEATURES

- TV adopts 32" TFT display screen;
- Zero X radiation complies to green environment protection requirement;
- Connect to computer directly to realize TV/monitor combo;
- 16:9 wide screen;
- Auto tuning and fine tuning;
- HDMI input;
- Component Compatible (480i; 480p; 576i; 576p; 720p; 1080i; 1080p);
- PC-RGB;
- Programmable sleep timer;
- Wide range voltage input;
- No-signal automatic power off;

INPUT TERMINALS USED FOR EXTERNAL EQUIPMENT CONNECTION

- 1 × ANTENNA jack;
- 1 × computer PC-RGB input;
- 1 × COMPONENT input;
- 2 × AV inputs;
- 1 × Headphone output;
- 3 × HDMI inputs;
- 1 × USB input;
- 1 × CVBS output;
- 1 × SPDIF output;

Stand and wall-mounting instructions (optional)

How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

- Before attaching/detaching the stand, make sure to turn off the TV.
- Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.

Assembling instruction:

Put the television on the table, fix the stand on the television with the four screws given in the carton.

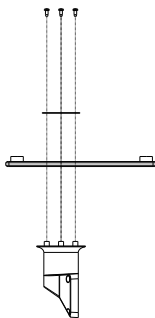


Figure 1

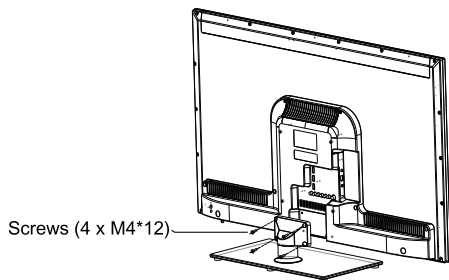


Figure 2

How to mount the LED TV on the wall

1. After detaching the stand, fasten 2 mounting screws (thread size M6X8-not supplied! Please contact your local hardware store) into the 2 screw holes on the rear cover, see the figure above.
2. Fasten wall mounting bracket (Not supplied with LED TV, please contact your local hardware store) with screws on the wall.
3. Carefully check for the strength before releasing the LED TV.

NOTE:

For more detailed instructions please refer to your "after market" wall mounting instruction book.

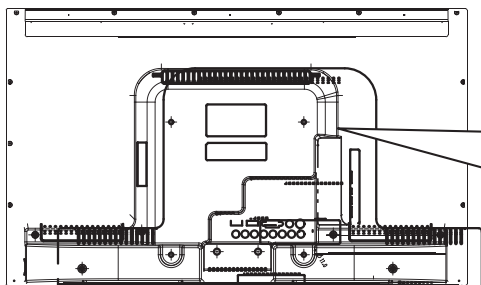


Figure 1


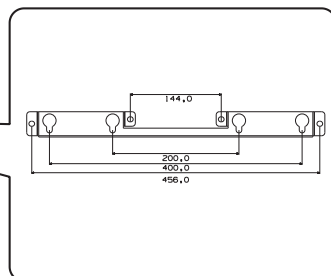


Figure 2

Figure1 Screws correspond to Figure2 wall mounting bracket.

OVERVIEW OF FRONT PANEL


The buttons on the lower-right panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

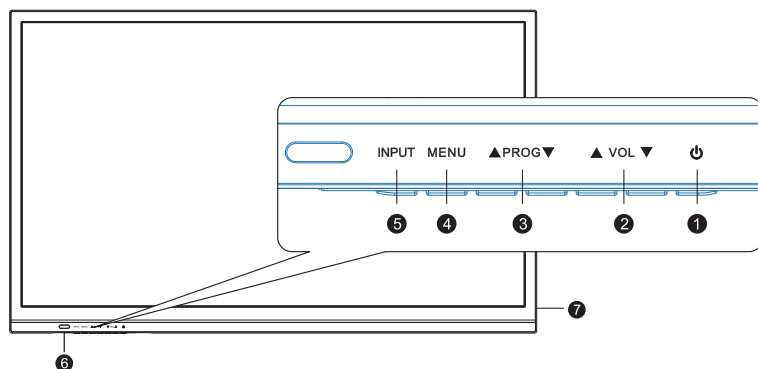


1. ⏻ Standby button
Press ⏻ button to toggle between normal and standby mode.
2. ▲ VOL ▼
Press to increase or decrease the volume. In the on-screen menu, use the ▲ VOL ▼ buttons as left/right arrow buttons.
3. ▲ PROG ▼
Press to change programs. In the on-screen menu, use the ▲ PROG ▼ buttons as up/down arrow buttons.
4. MENU
Press to see an on-screen menu of your TV's features.
5. INPUT
Toggles between all the available input sources.
6. REMOTE CONTROL SENSOR
Aim the remote control towards this spot on TV.
7. POWER SWITCH

OVERVIEW OF BACK PANEL

You can connect the TV with video devices such as DVD/VCD player, VCR and video camera to enjoy the high quality picture.

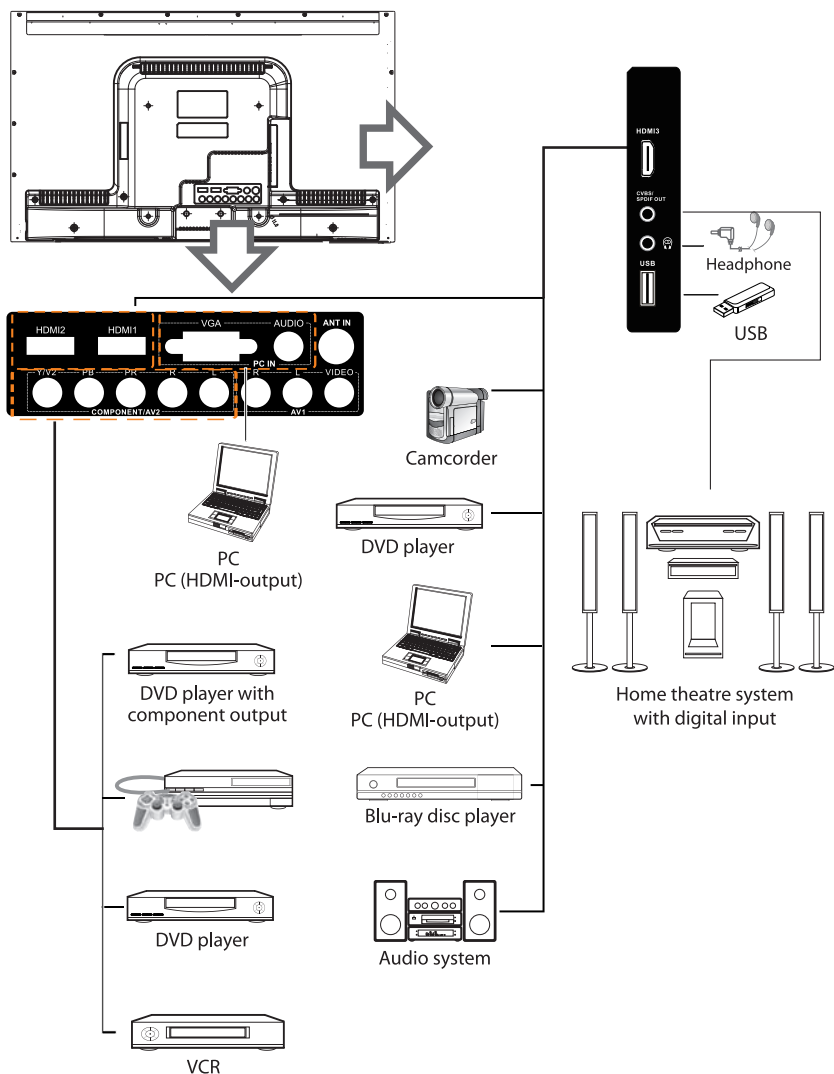


OVERVIEW OF REMOTE CONTROL

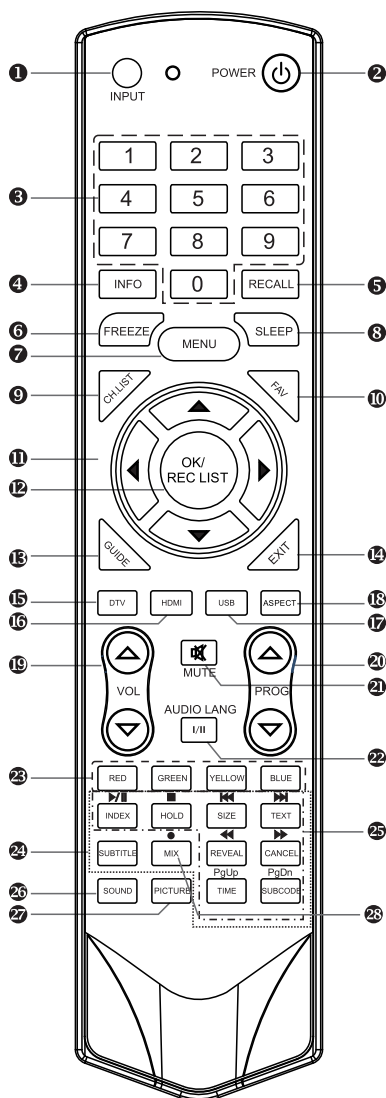

- INPUT:** This button is used to switch among different sources: DTV, ATV, AV1, AV2, Component, PC-RGB, HDMI1, HDMI2, HDMI3, USB. Select a source and press **OK** button to confirm.
- POWER** : Press this button to switch to standby mode, and press it again to turn TV on.
- Digital buttons (0~9):** To select channel with digital buttons.
- INFO:** This button is used to start the "Current Service Banner" application that provides information about the current service.
- RECALL:** Switch to the previous program.
- FREEZE:** Press this button to freeze the image.
- MENU:** Press this button to display main menu or exit the menu. When you are in the submenu, you can press it to return the main menu.
- SLEEP:** TV will be switched off automatically at preset sleep time if you have set sleep timer. Use your remote control to set the sleep timer. Press **SLEEP** button on the remote control, then press this button again to set sleep time: off, 10, 20, 30, 60, 90, 120, 180, 240 min. Press **MENU** button to exit when you have set the sleep timer. After you have set sleep timer, press **SLEEP** button again, you will see the Remaining time.
Notes: The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.
- CH.LIST:** Press it to show channel list on screen.
- FAV:** Press it to display favorite list.
- Arrow buttons:** Press these buttons to move cursor up/down/left/right for menu.
- OK/REC LIST:** Press this button to display a list of recorded programs. In main menu and submenu it is a validation button.
- GUIDE:** In DTV source, this button is used to start the EPG application.
- EXIT:** Exit the menu.
- DTV:** Switch to DTV mode.
- HDMI:** Switch to HDMI1 mode directly, press twice to switch to HDMI2, press three times to switch to HDMI3.
- USB:** Switch to USB mode directly or call the control menu in USB mode. Please see the details in chapter "Digital Media Player."
- ASPECT:** Press this button to switch the screen mode.
- VOL ▲ / ▼:** Press these buttons to adjust TV volume.
- PROG ▲ / ▼:** Press these buttons to change channel upward or downward. In the teletext, these buttons are used to display the next page and previous page.
- MUTE:** Press this button to shut off sound of the TV, press again to restore TV sound.


General Description

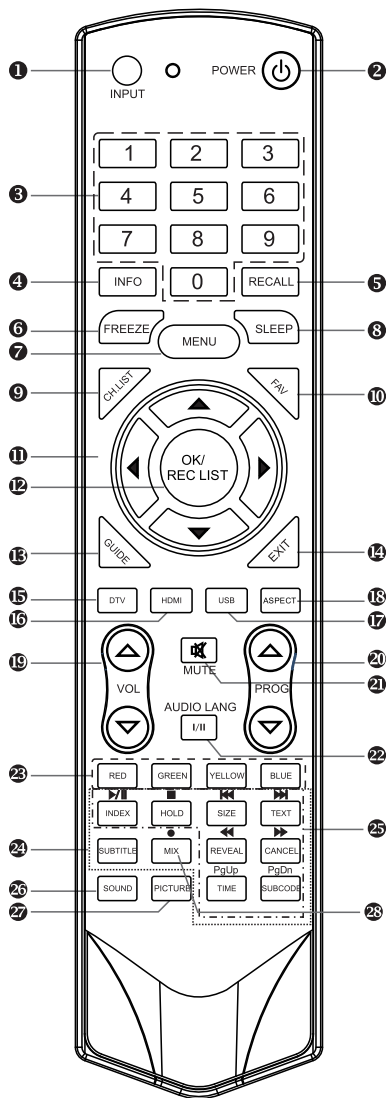

- 22. I/II / AUDIO LANG:** In ATV source, the button is used to set NICAM sound system.
In DTV source, the button is used to set the audio language.
In USB source, the button is used to make language soundtrack switch (video).
- 23. Red/Green/Yellow/Blue Command:** These four buttons are used to request linked buttons with the current menu/page.
- 24. Teletext buttons:** Detail operation please refer to "Teletext" in the next page.
- 25. Digital media player control button:** Including play/pause, stop, previous file, next file, page up, page down, backward, forward, is used to control in USB mode. Please refer to relevant instructions in the section of multimedia player.
- 26. SOUND:** This button is used to select the sound mode.
Standard — Music — Film — Sport — User
- 27. PICTURE:** This button is used to adjust user picture mode, press this button repeatedly and select one of four settings.
Standard — Mild — User — Sport.
- 28. MIX (●):** Teletext buttons for mix function. You will find more information later in the manual.

Teletext

Teletext is an information system broadcast by certain channels which be consulted like a newspaper. It also offers to subtitles for viewers with hearing problems or who are not familiar with the transmission language. You can press these buttons to operate the teletext:

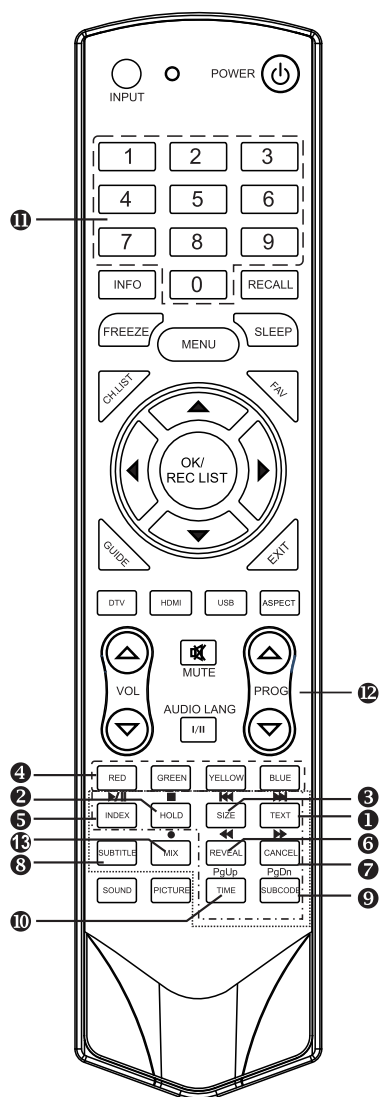


1. **TEXT**
Press **TEXT** button to enter or exit teletext mode.
2. **HOLD**
Press **HOLD** button to toggle Hold function on or off. When Hold is switched on, the page acquisition is stopped. When Hold is switched off, the page acquisition is started.
3. **SIZE**
Press **SIZE** button one time to display the upper half of the screen in double height, press the **SIZE** button two times to display the lower half of the screen in double height, press three times to display the full screen in normal size.
4. **Red/Green/Yellow/Blue Command**
These four buttons are used for quick access to different pages as numbered at the bottom of the screen.
5. **INDEX**
Press **INDEX** button, then index page displays.
6. **REVEAL**
Pressing this button will reveal any hidden data (answers to quizzes for example). Press the **REVEAL** button again to return to normal screen.
7. **CANCEL**
The **CANCEL** button will exit from any Teletext on the display. Press **CANCEL** button again to exit Teletext and return to live TV broadcast.
8. **SUBTITLE**
Turning the Teletext subtitles on or off. Subtitles is a separate mode with only a few buttons available. There will be no OSD visible other than the Teletext Subtitles.
9. **SUBCODE**
Subcode mode gives the possibility to select certain subcode pages of a Teletext page. Entry of digits within the range 0...9 for current subcode entry. If the digit completes the entry, a page request is started. Press **PROG ▲ / ▼** buttons to change the subcode pages.
10. **TIME**
This button is used to show the time of the Teletext.
11. **Digital buttons (0~9)**
You can press them to enter the number of the Page required.
12. **PROG +/-/PROG-**
You can press them to change page upward or downward.
13. **MIX**
Press **MIX** button, the teletext page changes transparent, TV content and teletext page content will display at the same time. Press **MIX** button again to exit **MIX** mode.


General Description

Installing Batteries in the Remote Control



1. Open the battery compartment cover on the back side.

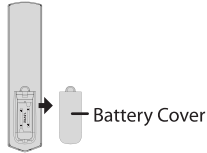

2. Insert two 1.5V AAA size batteries in correct polarity. Don't mix old or used batteries with new ones.

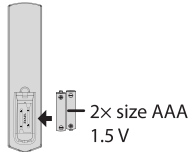

3. Closed the cover.

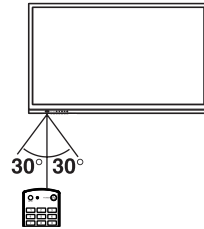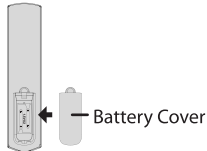

- Point the remote towards the remote control sensor of the TV and use it within 8 meters.
- Put the used batteries into the recycling bin since they can negatively affect the environment.

Note:


- One loading of batteries will last for 1 year under normal use.
- If you do not intend to use the remote controller for a long period of time, remove them to avoid damage due to leakage.
- Do not use old and new batteries together.
- The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

ANTENNA CONNECTION


Antenna input impedance of this unit is 75 ohm. VHF/UHF 75 ohm coaxial cable can be connected to the antenna jack directly, if the antenna cable is 300 ohm parallel flat feeder cable, you need to use the 300 ohm / 75 ohm converter to connect the antenna cable to the antenna jack. For details Please refer to the following drawing.

Antennas with 300 Ω flat twins Leads

Use a 75 ohm – 300 ohm converter

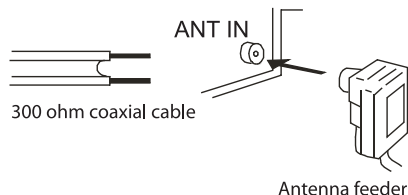


Antennas with 75 Ω Round Leads



CONNECTING VCR

These instructions assume that you have already connected your TV to an antenna or a cable TV system. Skip step 1 if you have not yet connected to an antenna or a cable system.

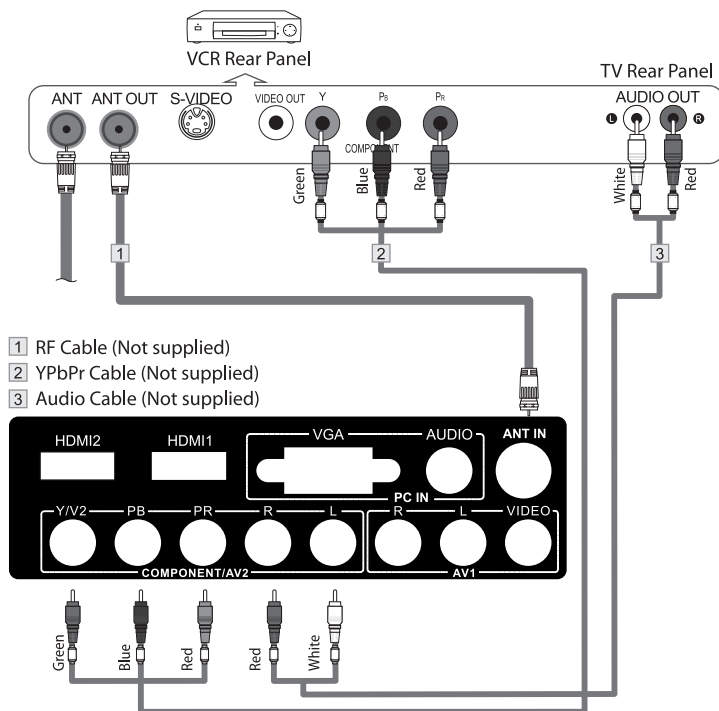

Follow the instructions in Viewing a VCR or Camcorder Tape to view your VCR tape. Each VCR has a different back panel configuration. When connecting a VCR, match the color of the connection terminal to the cable.

External Connection

1. Unplug the cable or antenna from the back of the TV.
2. Connect the cable or antenna to the ANT IN terminal on the back of the VCR.
3. Connect an RF Cable between the ANT OUT terminal on the VCR and the ANT IN terminal on the TV.
4. Connect a Component Cable between the COMPONENT [Y, Pb, Pr] jacks on the DVD player and YPbPr jack on the TV.
5. Connect Audio Cables between the AUDIO OUT jacks on the VCR and the AUDIO L and AUDIO R jacks on the TV.

Note:

Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
When connecting an external device, match the color of the connection terminal to the cable.

CONNECTING A CAMCORDER

The rear panel jacks on your TV make it easy to connect a camcorder to your TV. They allow you to view the camcorder tapes without using a VCR.

Each Camcorder has a different back panel configuration.

When connecting a Camcorder or DVD, match the color of the connection terminal to the cable.

1. Connect a Video Cable between the AV1 VIDEO jacks on the TV and the VIDEO OUT jack on the camcorder.
2. Connect Audio Cables between the AUDIO L and AUDIO R jacks on the TV and the AUDIO OUT jacks on the camcorder.
3. Connect a Video Cable between the component IN Y on the TV and the VIDEO OUT jack on the DVD.
4. Connect Audio Cables between the component IN AUDIO L and R jacks on the TV and the AUDIO OUT jack on the DVD.


Note:

Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
When connecting an external device, match the color of the connection terminal to the cable.

CONNECTING A DVD PLAYER / SET-TOP BOX

Note:


Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
When connecting an external device, match the color of the connection terminal to the cable.

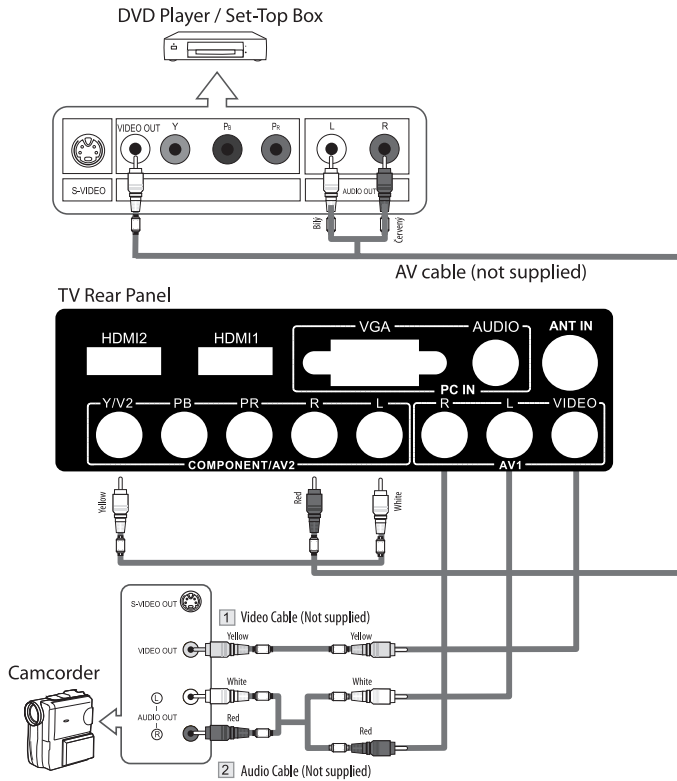

External Connection

CONNECTING A DVD PLAYER/SET-TOP BOX VIA DVI

This connection can only be made if there is a DVI Output connector on the external device.

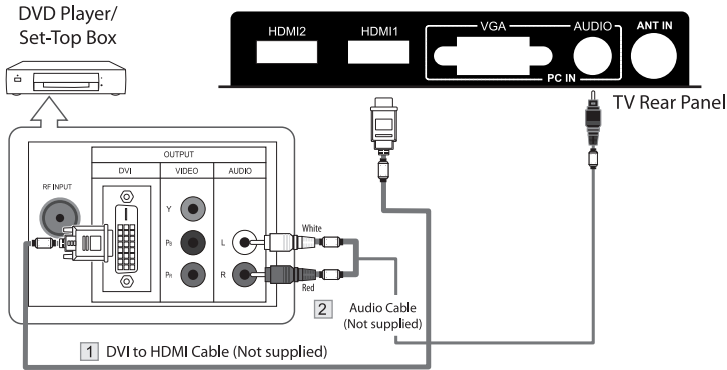

Each DVD player/STB has a different back panel configuration.

When connecting a DVD player/STB, match the color of the connection terminal to the cable.

1. Connect a DVI to HDMI Cable or DVI-HDMI Adapter between the HDMI 1, HDMI 2 or HDMI 3 connector on the TV and the DVI connector on the DVD player/Set-Top Box.
2. Connect Audio Cables between the PC AUDIO IN jack on the TV and the AUDIO OUT jacks on the DVD player/Set-Top Box.


Note:

Whenever you connect an external device to your TV, make sure that power on the unit is turned off.

When connecting an external device, match the color of the connection terminal to the cable.

CONNECTING DVD PLAYER/SET-TOP BOX VIA HDMI

This connection can only be made if there is a HDMI Output connector on the external device.

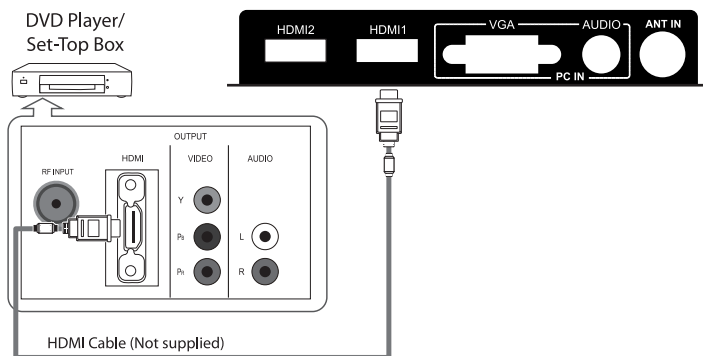

What is HDMI?

HDMI, or high-definition multimedia interface, is a next-generation interface that enables the transmission of digital audio and video signals using a single cable without compression.

Multimedia interface is a more accurate name for it especially because it allows multiple channels of digital audio (5.1 channels).

The difference between HDMI and DVI is that the HDMI device is smaller in size, has the HDCP (High Bandwidth Digital Copy Protection) coding feature installed, and supports multi-channel digital audio.

Each DVD player/STB has a different back panel configuration.

Connect an HDMI Cable between the HDMI1, HDMI2 or HDMI3 connector on the TV and the HDMI connector on the DVD player/Set-Top Box.


Note:

Whenever you connect an external device to your TV, make sure that power on the unit is turned off. When connecting an external device, match the color of the connection terminal to the cable.

External Connection

CONNECTING DIGITAL AUDIO SYSTEM


The rear panel jacks on your TV make it easy to connect a Digital Audio System to your TV.

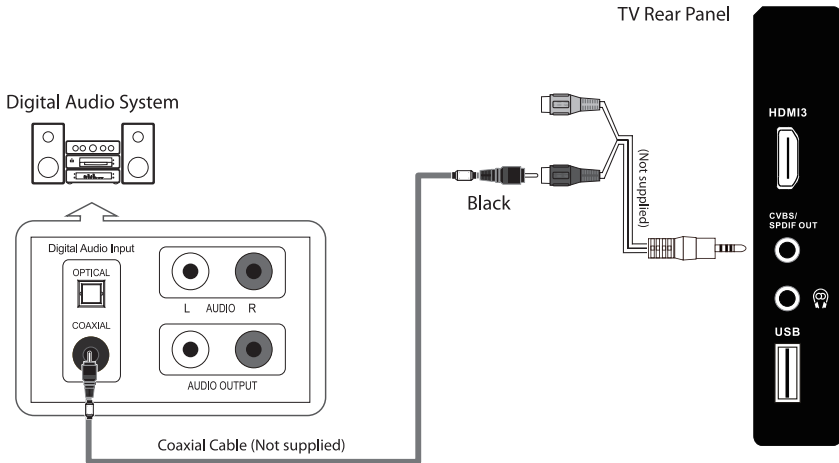

5.1 CH audio is possible when the TV is connected to an external device supporting 5.1 CH.

Connect an Coaxial Cable between the SPDIF jacks on the TV and the Digital Audio Input jacks on the Digital Audio System. When a Digital Audio System is connected to the SPDIF terminal: Decrease the gain (volume) of the TV, and adjust the volume level with the Digital Audio System's volume control.

CONNECTING PC

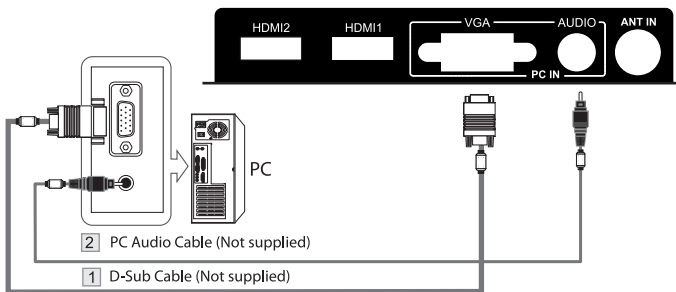

Each PC has a different back panel configuration.
The HDMI jacks do not support PC connection.

1. Connect a D-Sub Cable between VGA/PC IN connector on the TV and the PC output connector on your computer.
2. Connect a PC Audio Cable between PC AUDIO IN jack on the TV and the Audio Out jack of the soundcard on your computer.

You should set PC software before you connect a PC to your TV (please refer to "PC Display" settings)

Note:

Whenever you connect an external device to your TV, make sure that power on the unit is turned off.
When connecting an external device, match the color of the connection terminal to the cable.

SUPPORTING SIGNALS

Input	Mode
DTV	DVB-T
ATV	PAL BG DK I
	SECAM DK BG L
CVBS	PAL/NTSC/SECAM


Input	Resolution		Vertical Frequency
PC/VGA	VGA	640 × 480	60 Hz
			75 Hz
	SVGA	800 × 600	60 Hz
			75 Hz
	XGA	1024 × 768	60 Hz
			75 Hz
	SXGA	1360 × 768	60 Hz
			60 Hz

Input	Resolution	Vertical Frequency
Component	480i	60 Hz
	480p	60 Hz
	576i	50 Hz
	576p	50 Hz
	720p	50 / 60 Hz
	1080i	50 / 60 Hz
	1080p	50 / 60 Hz
HDMI	480p	60 Hz
	576p	50 Hz
	720p	50 / 60 Hz
	1080i	50 / 60 Hz
	1080p	50 / 60 Hz
DVI/HDMI	640 × 480	60 Hz
	800 × 600	60 Hz
	1024 × 768	60 Hz
	1280 × 1024	60 Hz

TURNING THE TV ON AND OFF

1. How to turn the TV on or off

1. Insert the power cord plug into a polarized AC outlet.
2. If TV is in standby mode, press **POWER** button on the remote control or  button on the bottom panel of LED TV.
3. Normal picture will be displayed on the screen after 15 seconds. If no signal input, "No Signal" will be displayed on the screen.
4. If temporary **POWER** off is required, press **POWER** button on the remote control or  button on the bottom panel.
5. If you want to completely switch off the power for this unit, unplug the power cord plug for this unit.
6. After switching off the unit, you should wait at least 5 seconds before switching on again.

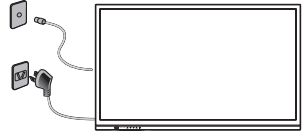

Status indication lamp

Red: In standby mode.

Green: In power on mode.

Auto power-off

If there is no signal, the TV will automatically enter standby mode after.

Memory before turning TV off

The picture and sound settings and preset channels will be memorised at the point when the TV is turned off. When the TV is started up again it will work accordingly with these settings.

MENU OPERATION


1. Input Setup

Press **INPUT** key on the remote control to enter **INPUT SOURCE** menu. There are eleven options for you to select: **DTV**, **ATV**, **AV1**, **AV2**, **Component**, **PC-RGB**, **HDMI 1**, **HDMI 2**, **HDMI 3** and **USB** use  key to move the cursor to the input you desired and press **OK** key to confirm.

2. Channels Selection

There are four ways to select channel:

1. Using number keys, and **OK** keys on the remote control to select channel directly. To select channel 90, press   . When you use the number buttons, you can directly select channels that were either erased or not memorized.
2. Using **PROG**  key on the remote control or on your TV to select channel.
3. When you press the **PROG**  key, the TV changes channels in sequence. You will see all the channels that the TV has memorized. You will not see channels that were either erased or not memorized.
4. Press **RECALL** key to return to previous channel, press it again to return to current channel. To quickly switch between two channels that are far apart, tune to one channel, then use the number keys to select the second channel. Then use the **RECALL** button to quickly alternate between them. **RECALL** is not activated if no channel has been changed after TV turning on.
5. Select channels from "Channel List" or "Favorite Channels List". Press **OK** key to select Channel.

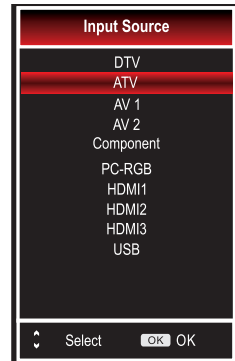

3. Volume Adjustment and Mute Setup

Volume adjustment

Press **VOL**  key on the remote control or on the TV to display "Volume" menu, adjust the volume of TV between 0 to 100 by using **VOL**  key:

- To increase the volume, press **VOL**  key;
- To decrease the volume, press **VOL**  key;



Mute

Press **MUTE** and the sound cuts off. The MUTE icon will appear in the lower-left corner of the screen. To resume sound, press the **MUTE** button again, or simply press the **VOL Δ** key.

4. Current Channel Information

Press **INFO** key on the remote control to view current channel information, the indications of channel information are listed in the following table.

9	
DTV	576i
SD	DOLBY MPEG

THE SHAK	Nine Digital	Subtitle Age 11	10:47
Wednesday 17 Jun 2009	09:41	12:00	NEXT >
Fears Ahhhh, it's time to face your fears!! it's a scary day at The Shak with the theme of Fears-Eco. Curio.			

Press **EXIT** key on the remote control to exit this OSD.

5. GUIDE Menu

Press **GUIDE** key to enter "GUIDE" menu, the first line displays current channel number, channel name, event title and current time.

The following line displays all programs that will be played on this channel, press **▲/▼** key to select the program you desired.

PROGRAMME GUIDE

18 Jun 2010 14:00

DTV

9 Nine Digital

MALCOLM IN THE MIDDLE

DTV

18 Jun 13:00-13:30

MALCOLM IN THE MIDDLE

18 Jun 13:30-14:30

THE SHAK

No Information

No Information

No Information

No Information

Pre Day

Next Day

Schedule

Reminder

Record

INFO

INFO

OK

OK

EXIT

Exit

DTV EPG (Electronic Program Guide)

In DTV mode, press **GUIDE** button to enter the Electronic Program Disabled. (Disabled when there is no signal)

- Electronic Program Guide information is provided by the broadcaster and displays scheduled programs for the week ahead (depending upon the broadcaster).
- TV program of each channel is listed under the time axis. Press **◀/▶** button to select the channel and press **▲/▼** button to highlight the program. The selected program's background colour will change to. Press **INFO** button to view the detailed information. Press **OK** to select the desired channel.
- Use the "Reminder"(blue) button to reserve programs. If the TV is in DTV mode, it will automatically turn to the reserved program at the scheduled time. Use "Schedule" (yellow) button to look up the reminder list.

Prev. Day: If you press the red key on the remote controller, It will show Previous Day's programs.

Next Day: If you press the green key on the remote controller, It will show Next Day's programs.

Schedule: If you press the yellow key on the remote controller, It will show the reminder list.

Reminder: If you press the blue key on the remote controller, It will show a command window, and you can set the reserve programs.

Record: If press the record **●** key on the remote controller it will show the **RECORDER** page.

Basic Operation

INFO: You can press the **INFO** key on the remote controller to show information in regards to the program you have chosen.

OK: you can press the OK key on the remote controller to select the channel you want to view.

EXIT: once you have selected a channel using the **OK** key, press the **EXIT** key to view that particular channel.

6. Installation Guide

When the TV is turned on for the first time, the **Installation Guide** will appear, it consists of 3 parts: OSD Language, Country, Channel Tuning.

1. Press **▲/▼** key to select **OSD Language** option, Press and **◀/▶** key to change Language.
2. Press **▲/▼** key to select **Country** option, and press **◀/▶** key to change Country.
3. Press **▲/▼** key to select **Channel Tuning** option, and press **OK** or **▶** to start tuning.

If you want to exit, press **EXIT** button and select **YES** then press **OK** button to exit.



NOTE: Install guide will also appear the first time you turn on the TV after performing the Reset function

Picture


1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select **Picture** option.
3. Press **▶** key to enter Picture submenu.
4. You can also press the **PICTURE** key on the remote control to select one of the picture settings.

Picture Mode

Your TV has five picture settings (Standard, Mild, Bright, user, Sports) that are preset at the factory. Only User mode can be set to your preference by adjusting particular items such as Contrast, Brightness, Color, Sharpness, Tint.

1. Press **▲/▼** key to select **Picture Mode** option.
2. Press **◀/▶** key to select one picture mode.

- **Standard:** Selects the picture for optimum display in a normal environment.
- **Mild:** Selects the picture for comfortable display in a dark room.
- **Bright:** Selects the picture for high-definition in a bright room.
- **User:** Select to view your favorite display settings (see User settings for PICTURE).
- **Sports:** Selects the picture for high-definition in a bright room.

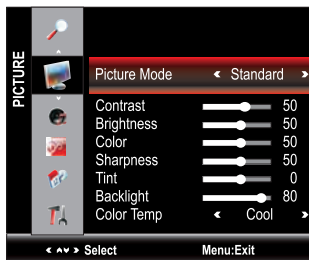

User settings for PICTURE (Contrast, Brightness, Color, Sharpness, Tint)

Your set has several settings which allow you to control picture quality.

1. Press ▲/▼ key to select a particular item.
2. Press ◀/▶ key to decrease or increase the value of a particular item.

Note: The adjusted values are stored according to the selected particular item.

Contrast: Adjusts the lightness and darkness between objects and the background.

Brightness: Adjusts the brightness of the picture.

Color: Adjusts the colors, making them lighter or darker.

Sharpness: Adjusts the outline of objects to either sharpen them or make them more dull.

Tint: Adjusts the color of objects, making them more red or green for a more natural look.

Tint can only be adjusted when signal is NTSC.

Adjusting the Backlight

You can the brightness of the entire screen according to your preference.

1. Press ▲/▼ key to select **Backlight** option.
2. Press ◀/▶ key to select one backlight mode.

Backlight: Adjusts the brightness of the whole screen.

Adjusting the Color Temp

You can change the color of the entire screen according to your preference.

1. Press ▲/▼ key to select **Color Temp** option.
2. Press ◀/▶ key to select one color temp.

Standard: Keeps whites white.

Warm: Makes whites reddish.

Cool: Makes whites bluish.

Sound

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select **Sound** option.
3. Press ▶ key to enter **Sound** submenu.
4. You can also press the **SOUND** key on the remote control to select one of the sound settings.


Sound Mode

You can select the type of special sound to be used when watching

a given broadcast. Your TV has eleven sound settings (**Standard** / **News** / **Movie** / **Sports** / **Dance** / **Classic** / **Pop** / **Rock** / **Jazz** / **Soft** / **User**) that are preset at the factory.

1. Press ▲/▼ key to select **Sound Mode** option.
2. Press ◀/▶ key to select one sound mode.

- **Standard:** Selects the normal sound mode.
- **News:** Provides clear and live sound for news.
- **Movie:** Provides live and full sound for movies.
- **Sports:** Emphasizes bass over other sounds.
- **Dance:** Select the sound mode for dances.
- **Classic:** Provides the classical sound for classic music.
- **Pop:** Select the sound mode for Pop.
- **Rock:** Provides powerful sound for Rock music.
- **Jazz:** Select the sound mode for Jazz.
- **Soft:** Select the soft sound mode.
- **User:** Selects your custom sound settings (See "User settings for Sound").

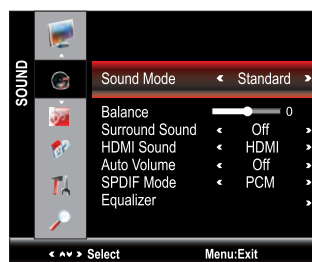

Basic Operation

Balance

If the volumes of the left speaker and the right speaker are not the same, you can adjust the "Balance" to suit your personal preference.

1. Press ▲/▼ key to select **Balance** option.
2. Press ◀/▶ key to decrease or increase the value of the item.

Surround Sound

This is used to turn on surround sound to gain better sound effect.

1. Press ▲/▼ key to select **Surround sound** option.
2. Press ◀/▶ key to select **Surround** or **Off**.

HDMI Sound

This option is only used in HDMI mode.

1. Press ▲/▼ key to select **HDMI Sound** option.
2. Press ◀/▶ key to select HDMI Sound mode, **HDMI** or **PC-RGB**.

Auto Volume

Each broadcasting station has its own signal conditions, and it is inconvenient to adjust the volume every time the channel is changed. **Auto Volume** automatically adjusts the volume of the desired channel by lowering the sound output when the modulation signal is high or by raising the sound output when the modulation signal is low.

1. Press ▲/▼ key to select **Auto Volume** option.
2. Press ◀/▶ key to select **On** or **Off**.

SPDIF Mode

This is used to select **SPDIF Mode**. This option is only used in HDMI/DTV mode.

1. Press ▲/▼ key to select **SPDIF Mode** option.
2. Press ◀/▶ key to select **RAW** or **PCM**.

User settings for SOUND (Equalizer)

1. Press ▲/▼ key to select an equalizer item.
2. Press **OK** or **▶** key to enter the equalizer submenu.

The sound settings can be adjusted to suit your user preferences.

1. Press ▲/▼ key to select a particular item.
2. Press ◀/▶ key to decrease or increase the value of a particular item.



Note: The adjusted values are stored according to the selected particular item.

Channel

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select **Channel** option.
3. Press **▶** key to enter "Channel" submenu.

Auto Search

Press ▲/▼ key elect "Auto Search" option. Then press **OK** or **▶** key to start a notice window. In this notice window, you can select country in the **Country Selection** option and set **Tune Type** option. Press **▼** button to select **Start**, and press **OK** button to search, then the searching interface will be on the screen as follows:
(If you want to exit, press ▲/◀/▶ button to select **Cancel**, and press **OK** button to exit.)

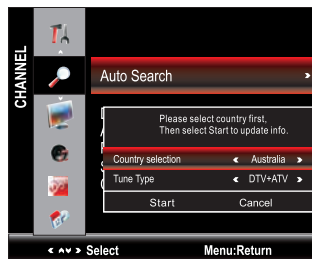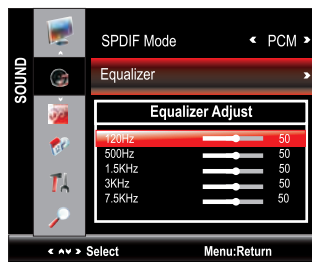


Basic Operation

The number of searched channels will be shown on the screen.

If you set **Tune Type** to **DTV+ATV**, When the searching of ATV channels is over, TV will start to search DTV channels. When the whole searching is finished, all the channels will be stored in memory, and a message will appear on the screen as per the diagram on the right:

NOTE:

1. If you want to exit the ATV searching, you can press **MENU** button, then a confirmation message will appear on the screen.
2. To exit DTV searching, press the **MENU** button, a confirmation message will then appear on the screen.
3. If you want to exit the whole searching, you can press **EXIT** button.

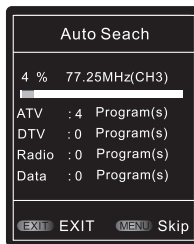

ATV Manual Search

In the ATV source, you can choose **ATV Manual Search** to enter **ATV Manual Search** menu.

Current CH: You can see the current channel number and you can press ◀/▶ button to choose the channel you want to modify.

Color System: Select the **Color System** option, press ◀/▶ on the remote control or TV. The color system will be changed repeatedly in the below order:
PAL – SECAM.


Sound System: Select the "Sound System" option, Press ◀/▶ on the remote control or TV. The sound system will be changed repeatedly in the below order:
BG → I → DK.

Search: You can use ▶ button to search channels from low frequency to high frequency and use ◀ button to search channels from high frequency to low frequency. When you have searched a channel, the searching will be paused and you can press it again for other channels after you store the channel.

Fine Tune: In case of unfavorable image or sound of TV program, you can use **Fine Tune**.

Skip: Select **Skip** option, "be changed" on the remote control or TV to switch, select **ON** to skip current program, select **OFF** to add the program into the program list.

Frequency: You can see the frequency of the searched channels.

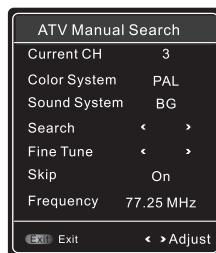

DTV Manual Search

In the DTV source, you can choose **DTV Manual Search** to enter "DTV Manual Search" menu.

You can use ◀/▶ button to choose the channel number and press **OK** button to enter searching, and then the TV will store the DTV channel if there is a DTV signal present.



Program Edit

You can use ▲/▼ button to choose **Program Edit** and enter the menu, press the Red/Green/Yellow/Blue color button on the remote control to delete, rename, move and skip programs, also you can press **FAV** button to add to your favorite list.

• DELETE

You can press RED button to enter "Delete" menu, then choose the channel you want to delete and press RED button again to delete.

• MOVE

You can press ▲/▼ button to choose the channel in ATV mode you want to move and press YELLOW button to move it.

• SKIP

You can press ▲/▼ button to choose the channel you want to skip and press BLUE button to skip it when you change channels.



Basic Operation

FAV

If you like the program of a channel, you can choose **FAV** button in the menu to add it to your favorite list and later you can press **FAV** button in the remote control to choose your favorite programs as soon as possible.

RENAME (green)


Rename some program from program list in ATV mode you want to Rename. Press ▲/▼ button to select the program that need to be renamed, then press green button into rename state, and press ◀/▶ button to select the letter that need to be edited, and press ▲/▼ button to select a new letter, repeat to rename the program.

Signal Information (Used only in DTV)

1. Press ▲/▼ key to select **Signal Information** option.
2. Press **OK** or ▶ key, you can see the information of the DTV channel.


NOTE: Signal Quality/Signal Strength (DTV Only):

Unlike analogue channels, which can vary in reception quality, digital channels must have perfect reception quality or you will not receive them at all. So, unlike analogue channels, you are not able fine tune a digital channel. If the signal strength indicates that the signal is weak, a possible solution is to adjust your antenna to increase the signal strength. Continue to adjust the antenna until you find the best position with the strongest signal.

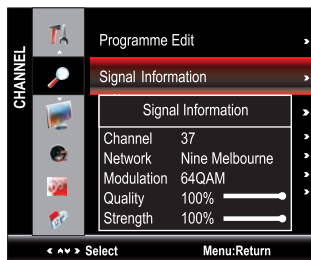

Time

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select **Time** option.
3. Press ▶ key to enter **Time** submenu.

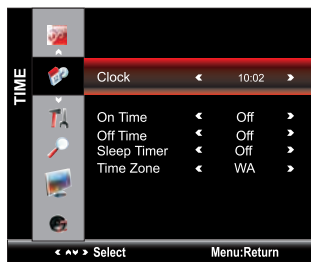


Clock

You can modify the time of your TV set, but when you switch to DTV program, the **Clock** is decided by the signal from your antenna.

Off/On Time

In "Off Time" item, press ▶ button or **OK** button to enter the submenu, set the day & time to turn off the TV set.

In **On Time** item, press ▶ button or **OK** button to enter the submenu, set the time to turn on the TV set, when the TV set is in the standby mode. You can also choose which day to control your TV set in a week.

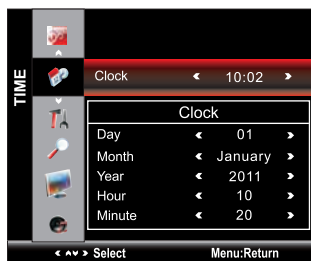

Sleep Timer

1. Press ▲/▼ key to select **Sleep Timer** option.
2. Press ◀/▶ key repeatedly until the desired time appears (Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min).

Notes:

1. The sleep timer you have set will be cancelled when the TV turns off or if a power failure occurs.
2. When the time is less than 60 seconds, remind information will be displayed on the screen. Press any key button to cancel timer function.

Time Zone

You can choose it to modify your time zone in the TV set.

1. Press ▲/▼ key to select **Time Zone** option.
2. Press ◀/▶ key to select time zone.

Option

1. Press **MENU** key to display the main menu on the screen.
2. Press ▲/▼ key to select **Option** option.
3. Press ▶ key to enter "Option" submenu.

OSD Setting

You can modify the OSD set to suit your user preferences.

1. Press ▲/▼ key to select **OSD Setting** option.
2. Press **OK** or ▶ key to display the OSD setting menu.

OSD Language: select the proper language

OSD Time: Set the preferred amount of time for the OSD to be displayed on the screen.

Screen Saver

This option is only used in ATV mode.

1. Press ▲/▼ key to select **Screen Save** option.
2. Press ◀/▶ to choose on or off.

Aspect Ratio

You can select the picture size which best corresponds to your viewing requirement.

1. Press ▲/▼ key to select **Aspect Ratio** option.
2. Press ◀/▶ key to set the scale mode.




You can also press **ASPECT** key on the remote control to select one of the scale modes. Each source has different scale modes. (**16:9, 4:3, Panorama, Movie, Subtitle, Full view, Auto**)

RESET

Select the **Reset** option and press **OK** or ▶ key to display a confirm box, and select **Yes** or **No**.

Note:

Please use the **Reset** option with caution as it will return all settings and channel memories to factory default.

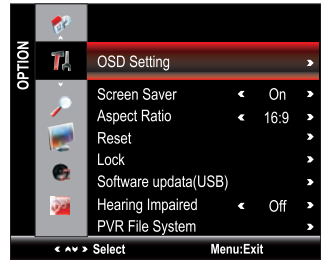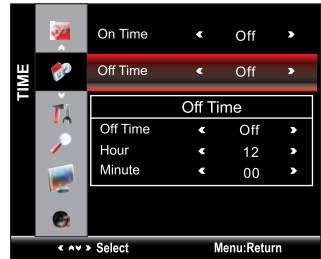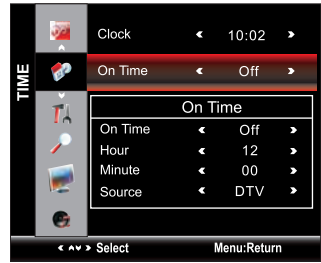

Basic Operation

Lock

The lock feature requires a Password to be entered before any settings can be changed.

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key and select **Lock** under the **Option** menu.
3. Press **OK** or **►** key to enter **Lock** submenu, **Enter Password** menu will appear, enter your 4-digit password to enter **Lock** submenu (the default and universal password is 0000, the almighty password is 1980).

Lock System

1. Press **▲/▼** key to select **Lock System** option.
2. Press **◀/▶** key to select **On** or **Off**.

Set Password

1. Press **▲/▼** key to select **Set Password** option.
2. Enter your 4-digit password to enter **Change Password** submenu. Choose any 4-digits for your new password and enter them. As soon as the 4 digits are entered, the cursor to **Confirm Password** item, re-enter the same 4 digits, and your new password has been memorized.



Block Program

1. Press **▲/▼** key to select **Block Program** option.
2. Press **OK** or **►** key to enter Block Program list.
3. In the program list, use Green key to lock or unlock the program. Once the program is locked and Lock System is on, password is needed to enter it.



Parental Guidance

This option only used in DTV mode.

1. Press **▲/▼** key to select **Parental Guidance** option.
2. Press **◀/▶** key to select the lock level of the Parental Guidance: NO BLOCK, BLOCK ALL, G, PG, M, MA, AV, R

Software Update (USB)

1. Press **▲/▼** key to select **Software Update (USB)** option.
2. Press **OK** or **►** key to software update process.

Note:

In the software update process, do not turn off the power.

Hearing Impaired

Specific Hearing Impaired subtitles can be activated subject to availability from broadcaster.

Note: Only available in DTV mode.

PVR File System

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲/▼** key to select **PVR File System** option.
3. Press **OK** or **►** key to enter "PVR File System" submenu, operation refer to "PVR File System".


Function

1. Press **MENU** key to display the main menu on the screen.
2. Press **▲ / ▼** key to select **Function** option.
3. Press **►** key to enter **Function** submenu.

Noise Reduction

1. Press **▲/▼** key to select **Noise Reduction** option.
2. Press **◀/▶** key to select **Off**, **Low**, **Middle**, **High** and **DEFAULT** to improve the picture sharpness.

Note: Noise Reduction doesn't work in PC-RGB Mode.

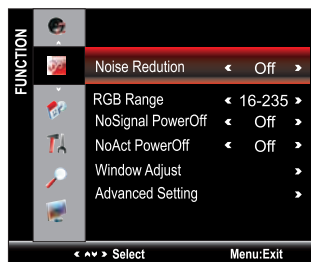

RGB Range

Change the brightness and saturation for a better picture.

1. Press **▲/▼** key to select **RGB Range** option.
2. Press **◀/▶** key to select "16~235" or "0~255".

Note: only available in HDMI mode, please select the appropriate setting according to the DVD Player/STB.

No Signal Power Off

1. Press **▲/▼** key to select **No Signal Power Off** option.
2. Press **◀/▶** key to set it **On** or **Off**. When **No Signal Power Off** is turned on, the TV set will be Power Off 15 seconds later in PC-RGB mode, 10 minutes later if there is no signal, in other input sources, not working in USB.

NoAct Power Off

1. Press **▲/▼** key to select **No ACT Power Off** option.
2. Press **◀/▶** key to set it **Off** or **1 Hour**, **2 Hour**, **4 Hour**. When **No ACT Power Off** is turned on, the TV set will be Power Off after the set-time if there is no action.

Window Adjust

This option is only used when PC-RGB mode has signal.

1. Press **▲/▼** key to select **Window Adjust** option.
 2. Press **OK** or **►** key to display the **Window Adjust** menu.
- **Auto Adjust:** Allows you to set the TV to self-adjust to the incoming PC-RGB video signal. The fine, coarse and position values are adjusted automatically.
 - **H-Position:** Set horizontal position of picture.
 - **V-Position:** Set vertical position of picture.
 - **Clock/Phase:** Remove or reduce picture noise.



Advanced Setting

Press **▲/▼** key to select **Advanced Setting**, then press **OK** or **►** key to display the **Advanced Setting** menu.

TTX Language

1. Press **▲/▼** key to select **TTX Language** option.
2. Press **◀/▶** key to set TTX Language.

Primary Audio Language

1. Press **▲/▼** key to select **Primary Audio Language** option.
2. Press **◀/▶** key to set Primary Audio Language.

Secondary Audio Language

1. Press **▲/▼** key to select **Secondary Audio Language** option.
2. Press **◀/▶** key to set Secondary Audio Language.

Basic Operation

Primary Subtitle Language

1. Press ▲/▼ key to select **Primary Subtitle Language** option.
2. Press ◀/▶ key to set Primary Subtitle Language.

Secondary Subtitle Language

1. Press ▲/▼ key to select **Secondary Subtitle Language** option.
2. Press ◀/▶ key to set Secondary Subtitle Language.

PVR File System



VAROVÁNÍ

1. Before connecting your USB device to the TV, please back up your files to prevent them from damage or loss of data.
2. A USB disk must be formatted when first used for PVR. Any existing data on the disk will be lost during the formatting process. Please back up your disk if you do not want to lose this data. You are recommended to use a dedicated disk for PVR use only. Do not disconnect disk or power during formatting.
3. Do not modify PVR files on a PC.

Note: Make sure your USB device is compatible with the TV and able to support PVR recording.

Select disc: Press **OK** button to enter submenu and press ◀/▶ to choose the disk for PVR.

Record Max Time: Press ◀/▶ to set the max time for PVR Record.

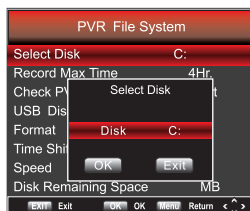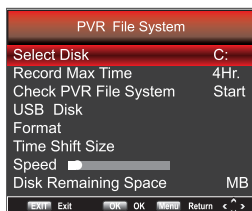

Record Max Time: Set the maximum duration for any recording.

Check PVR File System: Press **OK** button to check if the disk is suitable for PVR.


USB Disk: Indicates PASS or FAIL for the status of your USB Disk.

Format: Press **OK** button to enter format submenu. The disk must be formatted when first used for PVR. Do not disconnect disk or turn power off during formatting.

When formatting your disk, a progress bar will appear on the display.

NOTE:

The larger your device the longer it will take to format. The device may take many minutes to format, this is not a malfunction, please wait for the formatting to finish.

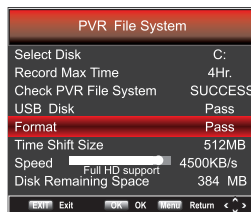

Time Shift Size: This setting is available to adjust only after the disk has been formatted. The maximum Time Shift Size is 8G.

Speed: Display the disk writing/reading speed.

Please note: It is suggested that you use a disk with speed that is greater than 4500 kB/s.

Disc Remain Space: Display the remaining space for PVR.


NOTE: The times listed are not precise, only for reference.

PVR Guide

If the disk for PVR is ready, the programs can be recorded in DTV mode.

Time Shift

In DTV mode, press ►/|| button to pause the DTV program, press it again to continue play. The length of time a program can be paused depends upon the setting in the PVR File System. Press **EXIT** to show or hide the control menu.



1. Current time behind live TV.
2. Total allowable time for time shifting, please see 'PVR File System' for details in regards to setting the Time Shift Size.

Press the **PLAY** button to continue playing the program from the point where it was paused.

NOTE:

Time Shift will stop if you change channels, change inputs or go into standby mode while in Time Shift mode. A message will appear on the display prompting you to continue or cancel.

Instant recording


1. Select the desired channel then press the **RECORD** button on the remote control to start recording the current broadcast, a progress bar will be displayed at the bottom of the screen. During recording, the progress bar will fade out after 10 seconds.
2. Recording stops when you press the **STOP** button and the recorded file is stored in the external USB device automatically.

NOTE:

You can only watch channels on the same frequency as the program being recorded. If you try to change to another channel a message will appear prompting you to continue or not 'Recording in progress. Change channel will stop recording. Yes or No.'

Recording in standby mode

This unit is able to do recording while in standby mode. Start a recording then press the power button. A message will be displayed prompting you to continue or cancel.




At Guide menu, press ● button to reserve -record the selected program.

At reserve record menu, press ◀/▶ button to adjust the scheduled time, press **OK** to save the setting and press the yellow button to check the record schedule. Recording will proceed when the TV is in either active or standby modes. When recording initialises in standby mode, the front panel indicators will flash momentarily, and there will be no picture output. You can intercept the recording by turning on the power and viewing the program that is being recorded. The schedules should not overlap, and there should be at least 1 min between two scheduled programs.



Basic Operation

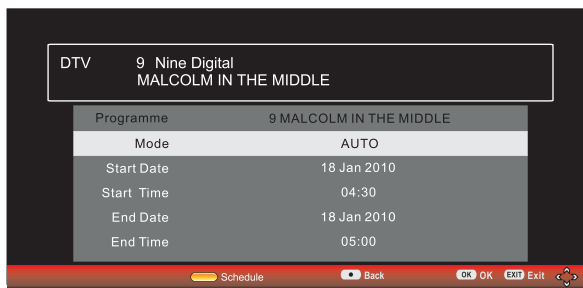

Note: Recording will stop when you change the locked channel.

In DTV mode, press **OK/REC LIST** to open the recorded list. Press **▲/▼** button to select the recorded file, press **OK/REC LIST** to play the recorded file, and press the **▶** button to show the recording information. Information. When playing, the **▶/II**, **▶▶**, **◀◀**, **■**, **◀◀**, **▶▶**, **●** buttons are available. Press **EXIT** to show or hide the control menu.

When the Recorded List is displayed on the screen, you can delete files you no longer require. Select the desired file using the arrow buttons, then press the Red button to delete.

NOTE: Files cannot be deleted during Playback or Recording.



Introduction

This TV is embedded with one USB port digital media player. It can find devices that support USB1.1/2.0, including flash disk, USB hard disk and digital camera. It supports functions as: Display pictures, Play music files, Play video files, Display text files.

Note


Please do not remove the cable during the data transfer. It may cause problems for the system.

Data	Format
Picture	JPG; JPE; PNG; BMP
Music	MP3; WMA; AAC;
Video	MPG; MPEG; MP4; MOV; MKV
Text	TXT

Remote Control Button

Description of Playback Buttons:

Buttons	Function
① ▶/	Play/Pause
② ■	Stop
③ ◀◀	Previous file
④ ▶▶	Next file
⑤ Pg Up	Page up/Zoom in (Picture)
⑥ Pg Dn	Page down/Zoom out (Picture)
⑦ ◀◀	Backward
⑧ ▶▶	Forward
⑨ OK	Display the short cut key
⑩ SUBTITLE	Subtitile switch (video)
⑪ I/II	Language Soundtrack Switch (video)

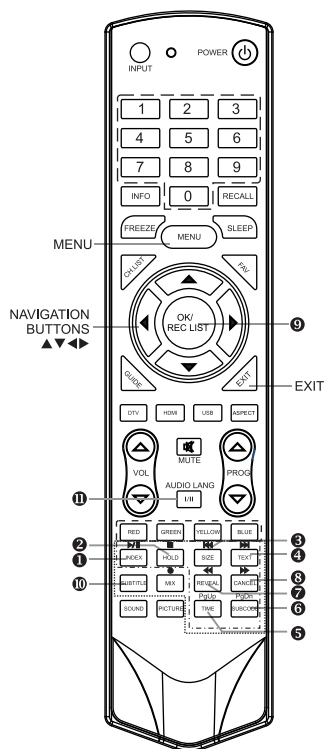

DEVICE AND FILE MANAGEMENT

Initialization Interface

Into the USB channel, the interface shown in Figure 1. If no inserted USB disk, the system will be prompted to insert the USB device, while the lower right corner screen displays "No Device" message. When you insert a USB disk, select the first letter located in the C drive, shown in Figure 2. The corresponding buttons as follows:

- Left and right keys: Select the drive letter.
- OK key: to enter the selected letter.

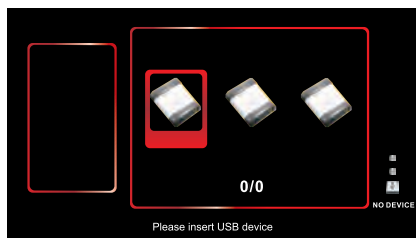


Figure 1

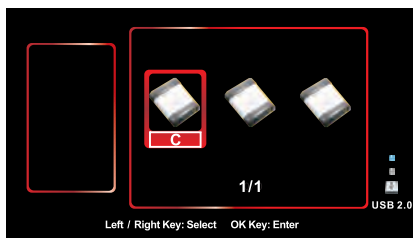


Figure 2

USB support character

1. Photo

Features: Browse and play under the specified path (the default path is specified in the current disk, set the photo interface methods please refer to the specified path: path - Set) picture.

Content: Browse and play all the images under the specified path.

Photos View Shown in Figure 3

Features: Displays thumbnails of all images path, bmp and png format does not support thumbnails.

Key operation

Up, Down, Left, Right: Option key to switch up and down.

OK Key: selected in the entry photo option on the left, the switch to the image preview area, was selected in the image preview area in the right section, then play image files.

Exit Key: selected in the entry in the right image preview area, select the entries to switch back to the left side of photo options, the selected option in the entry on the left picture, the switch back to the USB interface initialization.

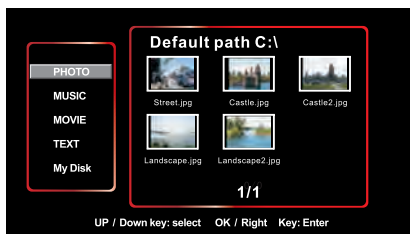


Figure 3

Photo Play interface (Shown in Figure 4)

Key operation:

The following key: Play on a picture / next picture

Left, Right: Reverse / Rotate the image clockwise

Confirmation: play / pause image

Exit: Exit the pictures to return to photo browsing interface



Figure 4

Menu key: enter the playback control menu.

Shown as Figure 5



Figure 5

Play Control menu

Key operation

Left, Right: Select Options

OK button: the selected function key to enter the selected Living the secondary function key menu.

Play / Pause: Play / Pause Picture.

Prev: Play on a picture.

Next: Play the next picture.

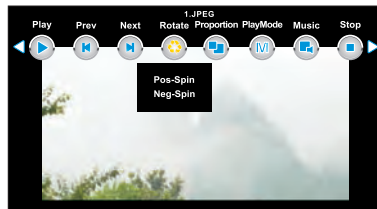


Figure 6

Rotate: Rotate the image counter-clockwise along. (Shown as Figure 6)

1. **Zoom Out:** enlarge image (1X, 2X, 4X, 8X)
2. **Zoom In:** shrink images (1/2, 1/4)
3. **Move view:** Mobile pictures. When the picture have been magnified over the role of screen size, Press **OK** to display the arrow guide OSD. Press the arrow keys to move a picture, press the **Escape** key to return to the previous menu, as shown in Figure 7.

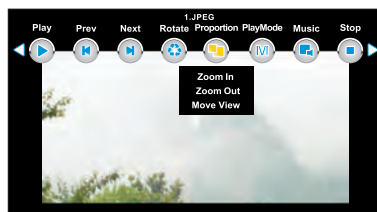


Figure 7

PlayMode: Shown as Figure 8

1. **Filmstrip:** loop all the pictures.
2. **Single:** Repeat the current picture.

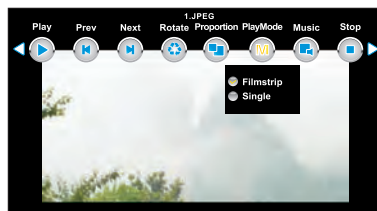


Figure 8

Music: Shown as Figure 9

Is set to play music all the music.

Stop: Exit Slideshow



Figure 9

Playlist: Show is playing and will play the image file. Shown as Figure 10.

Up, Down keys: select the image file

OK button: Play the selected picture file

Left, Right keys: Exit playlist, and select other options.

Exit button: Exit Playlists

Info: Display the name of the picture playback, resolution, size and date. (Shown as Figure 11)

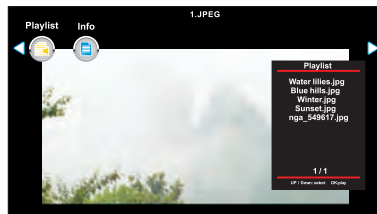


Figure 10

2. Music

Features: browse and play development path is to develop the current disk, set the method's interface, please refer to the specified path: Path – setting) music files.

Content: Displays the playback of music files under the specified path.

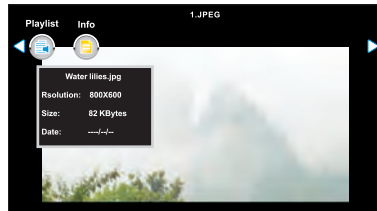


Figure 11

Browse Music

Content: Displays the music files. (Show as Figure 12)

Key operation:

Arrow keys: up and down between the different options about the switch.

OK key: Selected in the last entry in the left side of music options, the switch to music preview area; selected entries in the preview area on the right music, then play music files.

Exit: Selection preview in the music entry in the right area, select the entries to switch back to the left side of music options; selected entries in the music option on the left, the switch back to the USB interface initialization

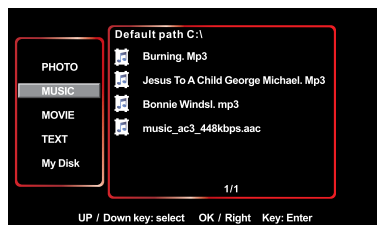


Figure 12

Play Music

Music player interface (Shown as Figure 13)

Left, Right: rewind / fast forward

Upper and lower key: on a / the next one

OK button: Play / Pause music

Exit: exit the music player interface, return to music browsing interface

Menu key: enter the playback control menu. (Shown as Figure 14)

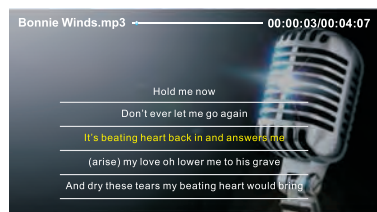


Figure 13

Play Control

Left, Right: Select Options

Confirm the key: the selected function key to enter the selected features live secondary menu items.

Exit: exit the playback control menu

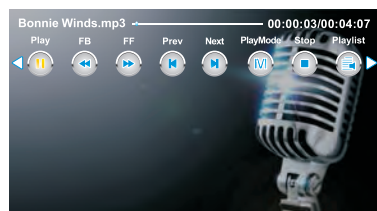


Figure 14

Function

Play / Pause: Play / Pause the music

FB: Fast back playing (2x, 4x, 8x, 16x)

FF: Fast forward playing (2x, 4x, 8x, 16x)

Prev: Play previous music

Next: Play next music

Play Mode: Shown as Figure 15

1. **By Order:** Play music as order
2. **Single:** Repeat single music
3. **Play Loop:** Play all the music in order loop.

Stop: Exit the music play

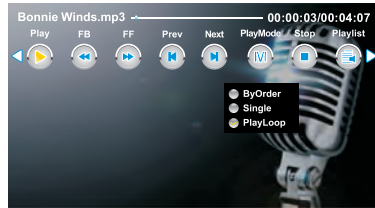


Figure 15

Playlist:

Show is playing and will play music files.

Shown as Figure 16.

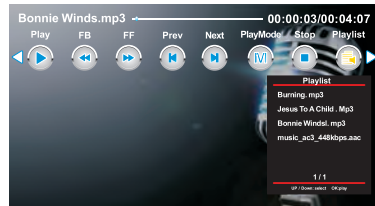


Figure 16

Info: Display the name of music, album name, title, stream, author, sampling year.

Shown as Figure 17.

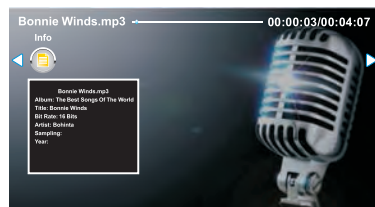


Figure 17

3. Movie

Features: browse and play video files under the specified path (default path is the current disk, set the video interface, the method please refer to the specified path: Path - setting)

Content: Displays the playback video files under the specified path. Shown in Figure 18.

Video view

Content: The specified path to all the video files displayed as thumbnails

Arrow keys: Up and down in the switch between different options.

OK key: Selected in the entry in the video options on the left, the switch to the video preview area; selected to the entry in the right side of the video preview area, then play the video file.

Exit: In the video preview on the right in the entry area, select the entries to switch back to the left of the video options. Selected to the entry in the video options on the left, the switch back to the USB interface initialization.

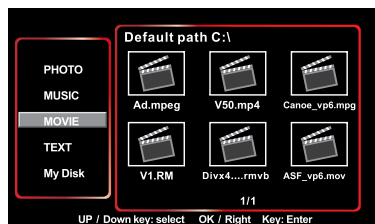


Figure 18

PLAY Video

Video player interface (Shown as Figure 19)

Left, Right: rewind / fast forward

Upper and lower key: on a / the next one

Exit: exit the video player interface, return to video browsing interface.

Menu key: enter the playback control menu.

Shown as Figure 20.



Figure 19

Play Control

Left, Right: Select Options

Confirm the key: the selected function key to enter the selected.

Features live secondary menu items

Exit: exit the playback control menu.

Action

Up, Down keys: Select the video file

OK button: Play the selected video files

Left, Right keys: Exit playlist, and select other options.

Exit button: Exit Playlists

Function

Play / Pause: Play / Pause the video

FB: Fast back playing (2x, 4x, 8x, 16x)

FF: Fast forward playing (2x, 4x, 8x, 16x)

Prev: Play previous video

Next: Play next video.

Switch: Shown as Figure 21

1. **Subtitles switch:** switch the currently playing video titles, this option the user can switch the video comes with different titles, select the **OFF** option, the subtitles will not be displayed.
2. **Track switch:** switch the currently playing video tracks.
3. **Goto Time:** Choose a specific time period the video play the video. Shown in Figure 22.

Proportion

Select the display ratio video playback. Shown in Figure 23.

1. Auto
2. 16:9
3. 4:3

Source of the film will switch to automatic mode by default.

PlayMode: Shown as Figure 24

1. **By Order:** Play video as order.
2. **Single:** Repeat single video.
3. **Play Loop:** Play all the video in order loop.

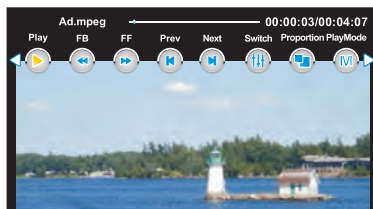


Figure 20

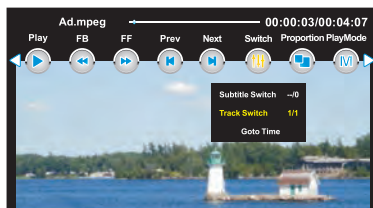


Figure 21

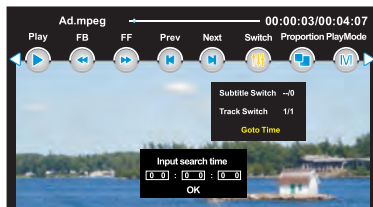


Figure 22

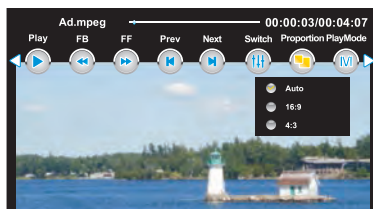


Figure 23

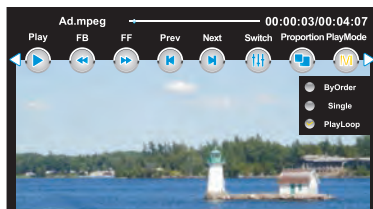


Figure 24

A->B: A to B repeat playback of video between points

- Set A: select the starting point. Shown as Figure 25.
- Set B: select the destination point. Shown as Figure 26.
- None: Cancel A-> B play and resume normal playback. As shown in Figure 27.

Slow: Play Slowly. (2X, 4X, 8X, 16X)

Stepping: Play just one picture each time the user clicks.

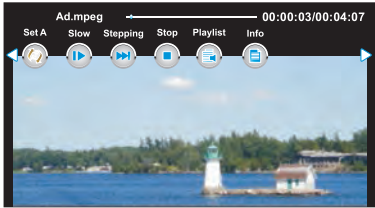


Figure 25

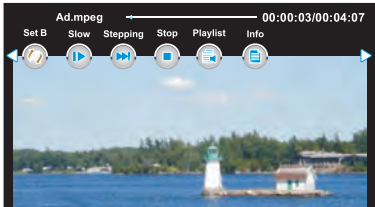


Figure 26

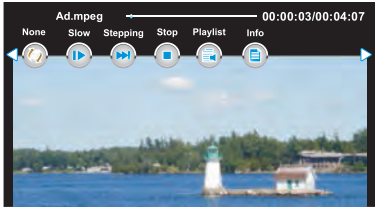


Figure 27

Stop: Exit the video play

Playlist: Show the videos files being playing and will be played. Shown as Figure 28.

Info: Shows the name of the video is playing, resolution, audio track, subtitles, program, title, version, chapters. Shown as Figure 29.

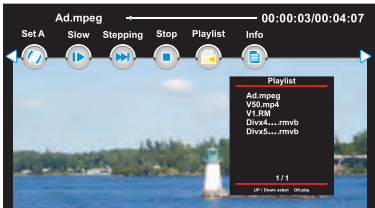


Figure 28

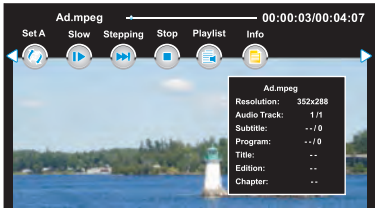


Figure 29

4. Text

Features: browse and play text files under the specified path (default path is the current disk, set the video interface, the method please refer to the specified path: Path - setting)

Content: Displays the playback text files under the specified path. Shown in Figure 30.

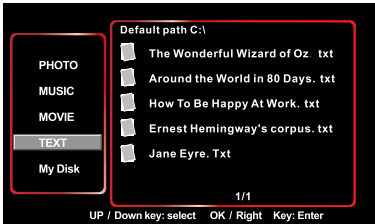


Figure 30

Document view

Content: The specified path to all the document files displayed as thumbnails.

Key operation:

Arrow keys: Up and down in the switch between different options.

OK key: Selected in the entry in the document options on the left, the switch to the video preview area; selected to the entry in the right side of the document preview area, then play the document file.

Exit: In the video preview on the right in the entry area, select the entries to switch back to the left of the document options. Selected to the entry in the document options on the left, the switch back to the USB interface initialization

Documents Reading

The Documents Reading interface: Shown as Figure 31.

Key operation:

Up, Down keys: Previous Page, Next Page

Left, right keys: Previous document, Next document.

Exit key: Return to the document interface

Menu key: Enter the playback control menu. As shown in Figure 32.

Play Control menu

Key operation:

Left, Right: Select Options

OK button: the selected function key to enter the selected Living the secondary function key menu.

Exit button: Exit Play control menu.

Function

Prev Page: Show previous page.

Next Page: Show next page.

Prev: Show previous document.

Next: Show next document.

Stop: Exit document reading.

Music: Shown as Figure 33.

When set to open, play music at the same time.

Goto Page: Select this feature, the pop-up dialog box jump page, the user can enter tie page number to view the page, select OK option, and enter the designated page, click Exit to return to playback control menu.

Playlist: displays document tiles can be played. Shown as Figure 34; Show the name, size of the document playing. As shown in Figure 35.

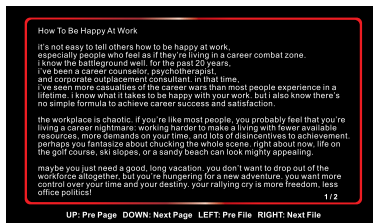


Figure 31

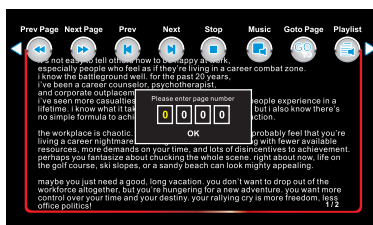


Figure 32

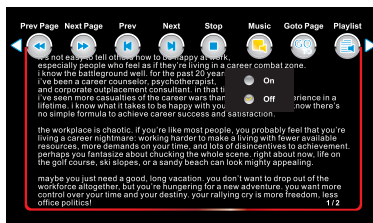


Figure 33

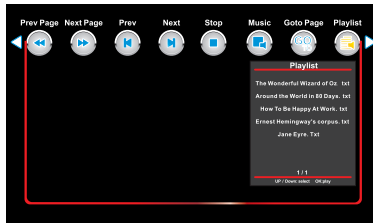


Figure 34

5. My Disk

Function: Displays the current disk under the folder, movies, music, pictures, text files; set "Photo", "music", "video", "document" the specified path. Shown as Figure 36.

Key operation:

Arrow keys: up and down between the different options about the switch.

OK key: If the focus is on the left side when Regional Options, switch to the right area; when the focus is on the right side file display area, if the focus on the folder, then into the folder. If movies, music, pictures, text, and then play the file.

Exit: If the focus is on the left, the switch back to the USB initialization interface; if the focus is on the right side of the menu and when in the root directory, then switch to the left region, if the focus is on the right side when the non-root directory, then return to the previous level directory.

Set path Description: display area is selected in the file folder, the folder will appear to set the right function. Right-click the arrow keys to select the settings option and then press the **OK** button will pop up settings dialog, set the box includes two options: the current disk and the current path. Up and down keys to switch between these two options, select the **OK** button is selected the path way out to save the current settings and launch path settings menu. As shown in Figure 37.

Current Drive

Set **Photo, Music, Video, Document** for the entire query path specified disk. This option is selected, each time a user visit the **Photo, Music, Video, Documents** for the current disk contains all the photos / music / video / document file.

Entry: If you enter the C drive, when setting the current disk is selected, the view, **photo, music, video, document** is displayed when the C drive, all photos / music / video / document file. As to the current disk to find the entire disk media files, so speed will be very slow, do not recommend this path set up.

Current Path

Set **Photo, Music, Video, Document** of the specified query path for the currently selected folder path. When choosen, each time a user browsing photos, music, video, document files is the current folder contains all the photos / music / video / document files. For example, the currently selected folder is **KKDOWNLOAD**, when elected in the current path, browsing the "photo", "music", "video", "document" to display all photos / music / video / document files in the **KKDOWNLOAD** folder. This will be faster when searching. Therefore, it is strongly recommended that users put all kinds of media files in a fixed folder and set folder to specify the path, so you can save search time.

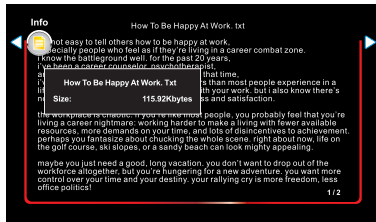


Figure 35

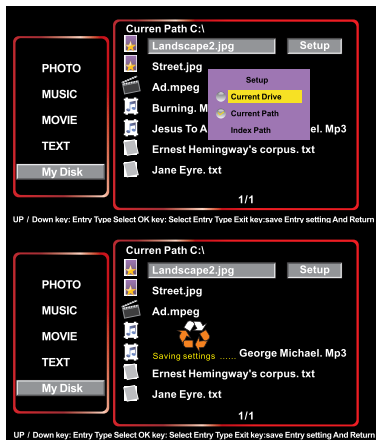


Figure 37

Troubleshooting

If you have any problem, check the counter measures for each symptom listed below. The following symptoms may have been caused by inappropriate adjustment rather than actual malfunction of the unit. If the trouble persists, contact the Customer Care Centre, see back page for contact details

Symptoms	Possible solutions
No power	Please check the power cord plugged in and that the power outlet works. Unplug the power cord and plug it in after 60 seconds and restart the TV.
No picture	Please check antenna connection. Station may be experiencing problems, please tune to another station. Please adjust the settings of contrast and brightness.
Good picture but no sound	Please increase the volume. Please check TV is under mute mode, press MUTE button on the remote control. Please check sound settings If external devices are being used, check their volumes are not set too low or turned off. If using AVI or Component inputs, please make sure cables are connected properly and not loose. If using DVI to HDMI cable, a separate audio cable is required. Make sure a headphone jack is not connected.
Good sound but abnormal color or no picture	Please check antenna connection and antenna condition. If using Component input, please check Component connections, incorrect or loose connections may cause colour problems or cause the screen to be blank.
No response to remote control	Batteries of remote control may have exhausted, if necessary, please change the batteries. Clean the remote control lens. The distance between LED TV and remote control should be within 8m, within recommended operating angle and path is free of obstructions.
Full screen flickering under VGA	V-HEIGHT value may be set too big, restart computer and enter safe mode, then set monitor parameters to correct value according to adjustment description.
Horizontal stripes under VGA	Sample phase may be deflected, adjust phase according to picture position.
Colored dots may be present on the screen	Although the LED screen is made with high-precision technology and 99.99% or more of the the pixels are effective, black dots may appear or bright points of light (red, blue, or green) may appear constantly on the LED screen. This is a structural property of the LED screen and not a malfunction.
Picture is breaking up	Keep the TV away from noisy electrical sources such as cars, hair dryers, welders, and all optional equipment. Electrical atmospheric interference such as local or distant lightning storms may cause picture to break up. When installing optional equipment, leave some space between the optional equipment and the TV. Check the antenna and connection. Keep the antenna away from any power or input/output cables.
After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.

Troubleshooting

Symptoms	Possible solutions
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc.	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off. If connected to your PC, check your PC power settings. Make sure the AC power cord is plugged in securely to the wall outlet and the TV.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.

Specifications

Model		SLE39F52M4
Display size		39" Diagonal (max.)
LED panel resolution		1920 × 1080
Speaker output power		≥ 5 W x 2
Power supply		~110-240V, 50/60Hz
TV receive system		Digital: DVB-T Analog: PAL: B/G; D/K; I; SECAM: B/G; D/K;
Frequency range		Analog: 46.25–855.25 MHz Digital: 5–12 MHz; 21–69 MHz
Video in		PAL / NTSC / SECAM
Power consumption		70 W
Standby consumption		< 0.5 W
Antenna input		75 Ω, unbalanced
Controller power		DC 3 V (Two AAA batteries)
Dimensions (L × W × H)	TV with stand	900 × 240 × 597 mm
	TV without stand	900 × 74.5 × 542 mm
Weight (Net weight)	TV with stand	10.8 kg
	TV without stand	8.8 kg
Work Temperature		0–40 °C

Note:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.

INSTRUCTIONS FOR THE CORRECT DISPOSAL OF THE PRODUCT

Instructions and information regarding the disposal of used packaging materials

Dispose of packaging material at a public waste disposal site.

Disposal of used electrical and electronic appliances



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product.

The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This appliance complies with EU rules and regulations regarding electromagnetic and electrical safety.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

Warranty conditions / Záruční podmínky / Záručné podmienky / Jotallasi feltetelek / Warunki gwarancji

Write the model and serial number below. / Níže si запиšte model a sériové číslo. / Nižšie si запиšte model a sériové číslo. / Alább írja oda a modell nevét és a sorozatszámot. / Poniżej należy zapisać model i numer seryjny

Model / Modell: _____

Serial no. / Výrobní číslo / Výrobné číslo / Szériaszám / Numer serijny: _____

Warranty conditions

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end-user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation...

This warranty is void especially if apply as follows:

Defects which were put on sale. • Wear-out or damage caused by common use. • The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for. • The product was damaged by uncared-for or insufficient maintenance. • The product was damaged by dirt, accident of force majeure (natural disaster, fire, flood, ...). • Defects on functionality caused by low duality of signal, electromagnetic field interference etc. • The product was mechanically damaged (e.g. broken button, fall...). • Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes,...). • Repair, modification or other failure action to the product by unauthorized person. • End-user did not prove enough his right to claim (time and place of purchase). • Data on presented documents differs from data on products. • Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

Záruční podmínky

Prodávající poskytuje kupujícímu na výrobek záruku v trvání 24 měsíců od převzetí výrobku kupujícím. Záruka se poskytuje za dále uvedených podmínek. Záruka se vztahuje pouze na nové spotřební zboží prodané spotřebiteli pro běžné domácí použití. Práva z odpovědnosti za vady (reklamaci) může kupující uplatnit buď u prodávajícího, u kterého byl výrobek zakoupen nebo v níže uvedeném autorizovaném servisu. Kupující je povinen reklamaci uplatnit bez zbytečného odkladu, aby nedocházelo ke zhoršení vady, nejpozději však do konce záruční doby. Kupující je povinen poskytnout při reklamaci součinnost nutnou pro ověření existence reklamované vady. Do reklamačního řízení se přijímá pouze kompletní a z důvodů dodržení hygienických předpisů neznečištěný výrobek. V případě oprávněné reklamace se záruční doba prodlužuje o dobu od okamžiku uplatnění reklamace do okamžiku převzetí opraveného výrobku kupujícím nebo okamžiku, kdy je kupující po skončení opravy povinen výrobek převzít. Kupující je povinen prokázat svá práva reklamovat (doklad o zakoupení výrobku, záruční list, doklad o uvedení výrobku do provozu...).

Záruka se nevztahuje zejména na:

Vady, na které byla poskytnuta sleva. • Opotřebení a poškození vzniklé běžným užíváním výrobku. • Poškození výrobku v důsledku neodborné či nesprávné instalace, použití výrobku v rozporu s návodem k použití, platnými právními předpisy a obecně známými a obvyklými způsoby používání, v důsledku použití výrobku k jinému účelu, než ke kterému je určen. • Poškození výrobku v důsledku zanedbané nebo nesprávné údržby. • Poškození výrobku způsobené jeho znečištěním, nehodou a zásahem vyšší moci (živelná událost, požár, vniknutí vody...). • Vady funkčnosti výrobku způsobené nevhodnou kvalitou signálu, rušivým elektromagnetickým polem apod. mechanické poškození výrobku (např. ulomení knoflíku, pád...). • Poškození způsobené použitím nevhodných médií, náplní, spotřebního materiálu (baterie) nebo nevhodnými provozními podmínkami (např. vysoké okolní teploty, vysoká vlhkost prostředí, otřesy...). • Poškození, úpravu nebo jiný zásah do výrobku provedený neoprávněnou nebo neautorizovanou osobou (servisem). • Případy, kdy kupující při reklamaci neprokáže oprávněnost svých práv (kdy a kde reklamovaný výrobek zakoupil). • Případy, kdy se údaje v předložených dokladech liší od údajů uvedených na výrobku. • Případy, kdy reklamovaný výrobek nelze ztotožnit s výrobkem uvedeným v dokladech, kterými kupující prokazuje svá práva reklamovat (např. poškození výrobního čísla nebo záruční plomba přístroje, přepisované údaje v dokladech...).

Záručné podmienky

Predávajúci poskytuje kupujúcemu na výrobok 24 mesiacov záruku od jeho prevzatia kupujúcim. Záruka sa poskytuje ďalej za nižšie uvedených podmienok. Záruka sa vzťahuje iba na spotrebný tovar predaný spotrebiteľovi na bežné domáce použitie. Práva zo zodpovednosti za chyby (reklamácie) môže kupujúci uplatniť buď u predávajúceho, u ktorého bol výrobok zakúpený alebo v nižšie uvedenom autorizovanom servise. Kupujúci je povinný reklamáciu uplatniť bez zbytočného odkladu, aby nedochádzalo ku zhoršeniu chyby, najneskôr však do konca záručnej doby. Kupujúci je povinný pri reklamácií spolupracovať pri overení existencie reklamovanej chyby. Do reklamačného procesu sa prijíma iba kompletný a z dôvodu dodržania hygienických predpisov neznečistený výrobok. V prípade oprávnenej reklamácie sa záručná doba predlžuje o dobu od okamžiku uplatnenia reklamácie do

okamžiku prevzatia opraveného výrobku kupujúcim, kedy je kupujúci po skončení opravy povinný výrobok prevziať. Kupujúci je povinný preukázať svoje práva reklamovať (doklad o zakúpení výrobku, záručný list, doklad o uvedení výrobku do prevádzky...).

Záruka sa nevztahuje na:

Chyby, na ktoré boli poskytnuté zľavy. • Opatrebnia a poškodenia vzniknuté bežným užívaním výrobku. • Poškodenie výrobku v dôsledku neodbornej či nesprávnej inštalácie, použitie výrobku v rozpore s návodom na použitie s platnými právnymi predpismi a všeobecne známymi a obvyklými spôsobmi používania, v dôsledku použitia výrobku za iným účelom, než na ktorý je určený. • Poškodenie výrobku v dôsledku zanedbanej alebo nesprávnej údržby. • Poškodenie výrobku spôsobené jeho znečistením, nehodou a zásahom vyššej moci (živelná udalosť, požiar, vniknutie vody...). • Chyby funkčnosti výrobku spôsobené nevhodnou kvalitou signálu, rušivým elektromagnetickým poľom a pod. • Mechanické poškodenie výrobku (napr. zlomenie gombíka, pád...). • Poškodenie spôsobené použitím nevhodných médií, náplní, spotrebného materiálu (batérie) alebo nevhodnými prevádzkovými podmienkami (napr. vysoké teploty v okolí, vysoká vlhkosť prostredia, otrasy...). • Poškodenie, úpravu alebo iný zásah do výrobku spôsobený neoprávnenou alebo neautorizovanou osobou (servisom) prípady, keď kupujúci pri reklamacii nepreukáže oprávnenosť svojich práv (kedy a kde reklamovaný výrobok zakúpil). • Prípady, keď sa údaje v predložených dokladoch líšia od údajov uvedených na výrobku. • Prípady, keď reklamovaný výrobok sa nestotožňuje s výrobkom uvedeným v dokladoch, ktorými kupujúci preukazuje svoje práva reklamovať (napr. poškodenie výrobného čísla alebo záručnej plomby prístroja, prepisované údaje v dokladoch...).

Jótallasi feltetelek

A fogyasztót a 151/2003. (IX.22.) kormányrendeletben meghatározott jogok illetik meg. A jótállási határidő a fogyasztási cikk fogyasztó részére történő átadása, vagy ha az üzembe helyezést a forgalmazó vagy annak megbízottja végzi, az üzembe helyezés napjával kezdődik. Az üzembe helyezés napját a megbízott a jótállási jegyen igazolja. A fogyasztó szavatossági jogait a 49/2003. (VII.30.) GKM rendelet szerint érvényesítheti, feltéve, hogy fogyasztónak minősül. (Fogyasztó: a gazdasági, vagy szakmai tevékenység körén kívül eső célból szerződést kötő személy - Ptk. 685.§ d) pont). Amennyiben a fogyasztó bemutatja az ellenérték megfizetését igazoló bizonylatot, úgy a fogyasztói szerződés megkötését bizonyítottanak kell tekinteni a 49/2003. (VII. 30.) GKM rendelet 2.§ alapján. Mindezek érdekében kérjük tisztelt Vásárlónkat, hogy őrizze meg a fizetési bizonylatot is. A jótállási idő az Ön által vásárolt termékre 24 hónap. A fogyasztó a javítás iránti igényét a kereskedelmi egységnél vagy a jótállási jegyen feltüntetett hivatalos szerviznél közvetlenül is érvényesítheti. A fogyasztási cikk meghibásodása esetén a fogyasztó - választása szerint – a garanciális igényét a vásárlás helyén vagy a kijelölt szervizben érvényesítheti. Ha a fogyasztó a fogyasztási cikk meghibásodása miatt a vásárlástól (üzembehelyezéstől) számított három munkanapon belül érvényesít csereigényét, a forgalmazó köteles a fogyasztási cikket kicserélni, feltéve, hogy a meghibásodás a rendeltetésszerű használatot akadályozza.

Nem érvényesíthető a jótállási igény, ha:

A hiba nem rendeltetésszerű használat, szakszerűtlen (nem a mellékelt használati útmutató szerinti) szállítás vagy tárolás, beüzemelés, iparszerű igénybevételnek, átalakításnak, a készüléken kívül álló ok – vis majornak (pl. hálózati feszültség megengedettnél nagyobb ingadozása) vagy a fogyasztó hibájából következett törés következménye. • Javításra nem jogosult személy által végzett beavatkozás nyomán. • A fogyasztási cikk vagy a hozzátartozó jótállási jegy nem azonosítható, illetve a jótállási jegy a valóságnak nem megfelelő adatokat tartalmaz. • Továbbá nem terjed ki a jótállás a fogyasztó feladatát képező karbantartási elvégzésére, illetve azok elmulasztásából következő meghibásodások kijavítására. A jótállás a fogyasztó törvényből eredő jogait nem érinti.

Warunki gwarancji

Produkt objęty jest 24 – miesięczną gwarancją, począwszy od daty zakupu przez klienta. Gwarancja jest ograniczona tylko do przedstawionych dalej warunków. Gwarancja obejmuje tylko produkty zakupione w Polsce i jest ważna tylko na terytorium Rzeczypospolitej Polskiej. Gwarancja obejmuje tylko produkty funkcjonujące w warunkach gospodarstwa domowego (nie dotyczy produktów oznaczonych jako „Professional”). Zgłoszenia gwarancyjne można dokonać w autoryzowanej sieci serwisowej lub w sklepie, gdzie produkt został nabyty. Użytkownik jest zobowiązany zgłosić usterkę niezwłocznie po jej wykryciu, a najpóźniej w ostatnim dniu obowiązywania okresu gwarancyjnego. Użytkownik jest zobowiązany do przedstawienia i udokumentowania usterki. Tylko kompletne i czyste produkty (zgodnie ze standardami higienicznymi) będą przyjmowane do naprawy. Usterki będą usuwane przez autoryzowany punkt serwisowy w możliwie krótkim terminie, nieprzekraczającym 14 dni roboczych. Okres gwarancji przedłuża się o czas pobytu sprzętu w serwisie. Klient może ubiegać się o wymianę sprzętu na wolny od wad, jeżeli punkt serwisowy stwierdzi na piśmie, że usunięcie wady jest niemożliwe. Aby produkt mógł być przyjęty przez serwis, użytkownik jest zobowiązany dostarczyć oryginały: dowodu zakupu (paragon lub faktura), podpisek i wypełnionej karty gwarancyjnej, certyfikatu instalacji (niektóre produkty).

Gwarancja zostaje unieważniona, jeśli:

Usterka była widoczna w chwili zakupu. • Usterka wynika ze zwykłego użytkowania i zużycia. • Produkt został uszkodzony z powodu złej instalacji, niezastosowania się do instrukcji obsługi lub użytkowania niezgodnego z przeznaczeniem. • Produkt został uszkodzony z powodu złej konserwacji lub jej braku. • Produkt został uszkodzony z powodu zanieczyszczenia, wypadku lub okoliczności o charakterze sił wyższych (powódź, pożar, wojny, zamieszki itp.). • Produkt wykazuje złe działanie z powodu słabego sygnału, zakłóceń elektromagnetycznych itp. • Produkt został uszkodzony mechanicznie (np. Wyłamany przycisk, upadek, itp.). • Produkt został uszkodzony z powodu użycia niewłaściwych materiałów eksploatacyjnych, nośników, akcesoriów, baterii, akumulatorów itp. lub z powodu użytkowania w złych warunkach (temperatura, wilgotność, wstrząsy itp.). • Produkt był naprawiany lub modyfikowany przez nieautoryzowany personel. • Użytkownik nie jest w stanie udowodnić zakupu (nieczytelny paragon lub faktura), dane na przedstawionych dokumentach są inne niż na urzędzeniu. Produkt nie może być zidentyfikowany ze względu na uszkodzenie numeru seryjnego lub plomby gwarancyjnej.

**Authorized service centres /Autorizovaná servisní střediska / Autorizované servisné strediská /
Autoryzowana sieć serwisowa**

CZ			
Fast ČR, a.s.	Říčany	Černokostelecká 1621	323 204 111
Fast ČR, a.s.	Brno	Cejl 31	531 010 295
ATV servis	Brno	Geislerova 1, vchod z ul. Táborské	541 249 327
Video TV Servis	České Budějovice	Na Zlaté Stoce 14	385 310 165
D+D	Hradec Králové	Tř. ČSA 216	495 512 949
Čepl Elektronika	Humpolec	Rašínova 466	565 532 021
Polák Petr	Jablonec n. Nisou	5. května 4/1081	483 313 363
Interservis	Liberec	28. října 41	482 770 941
Radio TV Servis DA-KR	Most	Obchodní 41	476 707 386
Televizní služba NOVA	Ostrava	Nádražní 102	596 112 446
Peas-Klema	Pardubice	Karla IV 41	466 612 188
VOBUKO	Písek	Havlíčkovo nám.	382 215 356
Audio-Video-Sat	Plzeň	Thámová 29	377 423 414
Elvia spol. s r.o.	Praha 5	Na Bělidle 34	257 322 220
Elvia spol. s r.o.	Praha 9	Poděbradská 51	220 311 190
Sattera	Ústí nad Labem	Šaldova 7	475 201 911
Elektron	Ústí nad Orlicí	Komenského 151	465 523 328
Sirius	Zlín	Zarámí 4077	577 439 333
SK			
FAST PLUS	Bratislava	Na Pántoch 18	02 49 1058 53-54
Servis T.V.	Horné Saliby	Podháhradná 393	031 77 171 45
AVES-SAT	Košice	Ceasta pod Hradovou 17	055 79 94 078
D-J SERVIS	Prešov	Šebastovská 17	051 77 676 66
TV-AV Elektronik s.r.o.	Žilina	Hviezdoslavova 9	041 56 26 061
HU			
FAST HUNGARY Kft.	Törökbálint	Depo, Pf. 102, 2046	23/330-830, 831

If there is not written a service center of your country, please contact your dealer.

Pokud není uveden servis ve vaší zemi, kontaktujte svého prodejce.

Ak nie je uvedený servis vo vašej krajine, kontaktujte svojho predajcu.

Ha nincs feltüntetve szerviz az Ön országában, lépjen kapcsolatba az eladóval.

Jeśli nie podano serwisu w Państwa kraju, prosimy o skontaktowanie się ze sprzedawcą.